OMRON **SYSMAC CS-series Programmable Controllers**

Safety Precautions

Thank you for purchasing an OMRON Programmable Controller (PLC) To ensure safe operation, please be sure to read the safety precautions provided in this document along with all of the user manuals for the Programmable Controller. Please be sure you are using the most recent versions of the user manuals. Contact your nearest OMRON representative to obtain manuals. Keep these safety precautions and all user manuals in a safe location and be sure that they are readily available to the final user of the products.

OMRON Corporation

©OMRON Corporation 2002 - 2012 All Rights Reserved.

■ General Precautions

The user must operate the product according to the performance specifications described in the operation manuals.

Before using the product under conditions which are not described in the manual or applying the product to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, petrochemical plants, and other systems, machines, and equipment that may have a serious influence on lives and property if used improperly, consult your OMRON representative.

Make sure that the ratings and performance characteristics of the product are sufficient for the systems, machines, and equipment, and be sure to provide the systems, machines, and equipment with double safety mechanisms.

■ Safety Precautions

Definition of Precautionary Information

	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
Caution	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or property
	damage.
Warnings and	Cautions

AWARNING	
^	supplied. Doing so may result in electric shock.
∠!\WARNING	Do not touch any of the terminals or terminal blocks while the

- power is being supplied. Doing so may result in electric shock. WARNING Do not attempt to disassemble, repair, or modify any Units. Any attempt to do so may result in malfunction, fire, or electric shock
- WARNING Provide safety measures in external circuits, i.e., not in the Programmable Controller (CPU Unit including associated Units; referred to as "PLC"), in order to ensure safety in the system if an abnormality occurs due to malfunction of the PLC or another external factor affecting the PLC operation. Not doing so may result in serious accidents.
- · Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits.
- The PLC will turn OFF all outputs when its self-diagnosis function detects any error or when a severe failure alarm (FALS) instruction is executed. As a countermeasure for
- such errors, external safety measures must be provided to ensure safety in the system. • The PLC outputs may remain ON or OFF due to deposition or burning of the output relays or destruction of the output transistors. As a countermeasure for such problems, external
- safety measures must be provided to ensure safety in the system. • When the 24-VDC output (service power supply to the PLC) is overloaded or
- short-circuited, the voltage may drop and result in the outputs being turned OFF. As a countermeasure for such problems, external safety measures must be provided to ensure safetv in the system

A	
∠!\Caution	Pay careful attention to the polarities (+/-) when wiring the
<u> </u>	DC power supply. A wrong connection may cause malfunction of the system.
Caution	Execute online edit only after confirming that no adverse effects will be caused by extending the cycle time. Otherwise, the input signals may not be readable.
Caution	Confirm safety at the destination node before transferring a program to another node or editing the I/O area. Doing
^	either of these without confirming safety may result in injury.

- /!\Caution Tighten the screws on the terminal block of the AC Power Supply Unit to the torgue specified in the operation manual The loose screws may result in burning or malfunction.
- ∠ <u>
 </u>
 <u>
 </u>
 Caution Do not touch the Power Supply Unit during power-on, and immediately after power-off. Hot surface may cause heat iniury.



After programming (or re-programming) using the IOWR instruction, confirm that correct operation is possible with the new ladder program and data before starting actual operation. Any irregularities may cause the product to stop operating, resulting in unexpected operation in machinery or equipment.

Operating Environment Precautions

Caution Do not operate the control system in the following places: · Locations subject to direct sunlight

- · Locations subject to temperatures or humidity outside the range specified in the specifications
- · Locations subject to condensation as the result of severe changes in temperature
- · Locations subject to corrosive or flammable gases
- Locations subject to dust (especially iron dust) or salts · Locations subject to exposure to water, oil, or chemicals
- Locations subject to shock or vibration

0675177-0B

Take appropriate and sufficient countermeasures when installing systems in the following locations:

- · Locations subject to static electricity or other forms of noise
- · Locations subject to strong electromagnetic fields Locations subject to possible exposure to radioactivity
- · Locations close to power supplies
- The operating environment of the PLC System can have a large effect on the longevity and reliability of the system. Improper operating environments can lead to malfunction, failure, and other unforeseeable problems with the PLC System. Be sure that the operating environment is within the specified conditions at installation and remains within the specified conditions during the life of the system.

Application Precautions

- WARNING Always heed these precautions. Failure to abide by the following precautions could lead to serious or possibly fatal injury.
- Always connect to 100 Ω or less when installing the Units. Not connecting to a ground of Always connected to 20 and 20 and
- turning OFF the power supply may result in malfunction or electric shock
- Mounting or dismounting Power Supply Units, I/O Units, CPU Units, Memory Cassettes, or any other Units
- Assembling the Units
- Setting DIP switches or rotary switches
- · Connecting or wiring the cables
- · Connecting or disconnecting the connectors
- Failure to abide by the following precautions could lead to faulty operation of the PLC or the system, or could damage the PLC or PLC Units. Always heed these precautions.
- · Always use the power supply voltage specified in the operation manuals
- An incorrect voltage may result in malfunction or burning. Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied. Be particularly careful in places where the power supply is
- unstable. An incorrect power supply may result in malfunction. Install external breakers and take other safety measures against short-circuiting in external wiring. Insufficient safety measures against short-circuiting may result in burnina.
- Do not apply voltages to the Input Units in excess of the rated input voltage Excess voltages may result in burning.
- Do not apply voltages or connect loads to the Output Units in excess of the maximum switching capacity. Excess voltage or loads may result in burning.
- · Disconnect the functional ground terminal when performing withstand voltage tests. Not disconnecting the functional ground terminal may result in burning.
- Install the Unit properly as specified in the operation manual. Improper installation of the Unit may result in malfunction.
- Be sure that all the mounting screws, terminal screws, and cable connector screws are tightened to the torque specified in the relevant manuals. Incorrect tightening torque may result in malfunction
- · Leave the label attached to the Unit when wiring in order to prevent wire cuttings from entering inside the Unit. Removing the label may result in malfunction.
- · Remove the label after the completion of wiring to ensure proper heat dissipation Leaving the label attached may result in malfunction.
- · Use crimp terminals for wiring. Do not connect bare stranded wires directly to terminals. Connection of bare stranded wires may result in burning.
- · Wire correctly and double-check all the wiring or the setting switches before turning ON the power supply. Incorrect wiring may result in burning.
- · Mount the Unit only after checking the connectors and terminal blocks completely.
- · Be sure that the terminal blocks, connectors, Memory Units, expansion cables, and other items with locking devices are properly locked into place. Improper locking may result in malfunction.
- · Check the user program for proper execution before actually running it on the Unit. Not
- checking the program may result in an unexpected operation · Check that the DIP switches and data memory (DM) are properly set before starting
- operation.Set the Detect Low Battery Bit in the PLC Setup to "do not detect" before starting
- battery-less operation. · Confirm that no adverse effect will occur in the system before attempting any of the following. Not doing so may result in an unexpected operation.
 - Changing the operating mode of the PLC.
 - · Force-setting/force-resetting any bit in memory
 - Changing the present value of any word or any set value in memory.

· Before turning OFF the power supply, confirm that the Units will start in the appropriate operating modes the next time the power supply is turned ON

- Resume operation only after transferring to the new CPU Unit and/or Special I/O Units the contents of the DM and HR Areas required for resuming operation. Not doing so may result in an unexpected operation.
- Do not pull on the cables or bend the cables beyond their natural limit. Doing either of these may break the cables.
- Do not place objects on the cables. Doing so may break the cables.
- Use the dedicated connecting cables specified in operation manuals to connect the Units. Using commercially available RS-232C computer cables may cause failures in external devices or the CPU Unit.
- . When replacing parts, be sure to confirm that the rating of a new part is correct. Not doing so may result in malfunction or burning.
- . When replacing the battery for a Unit, be sure to follow the procedure described in that Unit's operation manual.
- Before touching the Unit, be sure to first touch a grounded metallic object in order to discharge any static built-up. Not doing so may result in malfunction or damage
- Do not turn OFF the power supply to the Unit while data is being transferred. . When transporting or storing the product, cover the PCBs with electrically conductive materials to prevent LSIs and ICs from being damaged by static electricity, and also keep the product within the specified storage temperature range
- Do not touch the mounted parts or the rear surface of PCBs because PCBs have sharp edges such as electrical leads.
- Double-check the pin numbers when assembling and wiring the connectors.
- · Wire correctly according to specified procedures. • The operation mode upon turning the power ON varies depending on the model. Refer to the user manual for details.

Reference Manuals

manuals in order to use the PLC safely and properly. Be sure you are using the most current version of the manual

Name	Cat. No.
CS-series CS1G/H-CPU H Programmable Controllers Operation Manual	W339
CS-series CS1D Duplex System Operation Manual	W405
CS/CJ-series CS1G/H-CPU=H, CS1G/H-CPU=EV1, CJ1G-CPU=, CJ1G/H-CPU=H Programmable Controllers Programming Manual	W394
CS/CJ-series CS1G/H-CPU H, CS1G/H-CPU C-EV1, CJ1G-CPU, CJ1G/H-CPU H Programmable Controllers Instructions Reference Manual	W340
CS/CJ-series CS1G/H-CPU H, CS1G/H-CPU C-EV1, CJ1G-CPU , CJ1G/H-CPU H Programmable Controllers Commands Reference Manual	W342
CS1W-SCB21/41(-V1), CS1W-SCU21(-V1) Operation Manual	W336
CS1W-ETN01/11 Ethernet Unit Operation Manual	W343
CS1W-DRM21 DeviceNet Unit Operation Manual	W380
DeviceNet Operation Manual	W267
CVM1-DRM21-V1/C200HW-DRM21-V1 DeviceNet Master Units Operation Manual	W379
C200HW-DRT21/CQM1-DRT21/DRT1 Series DeviceNet Slaves Operation Manual	W347
C200HW-SRM21/CQM1-SRM21/SRT1 Series CompoBus/S Operation Manual	W266
C-series PC Link System Manual	W135
C-series Rack PCs Optical Remote I/O System Manual	W136
C-series Rack PCs Wired Remote I/O System Manual	W120
CS1W-CLK23/CLK21-V1 (wired) Controller Link Units Operation Manual	W309
CVM1-CLK12/CS1W-CLK12(-V1) (Optical Ring H-PCF Type) CVM1-CLK52/CS1W-CLK52(-V1) (Optical Ring GI Type) Controller Link Units Operation Manual	W370
C200HW-ZW3AT2-E-V2 Controller Link Support Software Operation Manual	W369
CS1W-HIO01/HCP22/HCA22 Customizable Counter Units Operation Manual	W378
CS1W-HIO01/HCP22/HCA22 Customizable Counter Units Programming Manual	W384
CS1W-LC001 Loop Control Unit Operation Manual	W374
CS1W-LC001 Loop Control Unit Function Block Reference Manual	W375
CS1W-LCB01/05 Loop Control Board Operation Manual	W406
CS1W-LCB01/05 Loop Control Board Function Block Reference Manual	W407
WS02-LCTC1-E CX-Process Tool Operation Manual	W372
WS02-LCTC1-E CX-Process Monitor Operation Manual	W373
CS1W-PTS01/PTS02/PTS03/PTW01/PDC01/PTR01/PTR02/PPS01/PMV01 Analog I/O Units Operation Manual	W368
CS1W-AD041(-V1)/081 (-V1), CS1W-DA041/08V/08C, CS1W-MAD44, CJ1W-AD041-V1/081(-V1), CJ1W-DA021/041 Analog I/O Units Operation Manual	W345
C200H-AD003/DA003/DA004/MAD01 Analog I/O Unit Operation Manual	W325
C200H Analog I/O Units Operation Guide	W127
C200H-AD002 Analog Input Unit Operation Manual	W229
C200H-TS001/101 Temperature Sensor Unit Operation Manual	W124
C200H-TC	W225
C200H-TV	W240
C200H-PID0 PID Control Unit Operation Manual	W241
CS1W-CT021/041 High-speed Counter Units Operation Manual	W902
C200H-CT021 High-speed Counter Units Operation Manual	W311
	W141
C200H-CT001-V1/002 High-speed Counter Units Operation Manual	
	W376
C200H-CT001-V1/002 High-speed Counter Units Operation Manual	W376 W137
C200H-CT001-V1/002 High-speed Counter Units Operation Manual CS1W-NC113/213/413/133/233/433 Position Control Unit Operation Manual	
C200H-CT001-V1/002 High-speed Counter Units Operation Manual CS1W-NC113/213/413/133/233/433 Position Control Unit Operation Manual C200H-NC111 Position Control Unit Operation Manual	W137

Name	Cat. No.
C200H-CP114 Cam Positioner Unit Operation Manual	W224
CS1W-MC421/221 Motion Control Unit Operation Manual	W359
C200H-MC221 Motion Control Unit Operation Manual: Introduction	W314
C200H-MC221 Motion Control Unit Operation Manual: Details	W315
C200H-ASC02 ASCII Unit Operation Manual	W165
C200H-ASC11/21/31 ASCII Unit Operation Manual	W306
C200H-IDS01-V1/IDS21 ID Sensor Operation Guide	W153
C200H-FZ001 Fuzzy Logic Unit Operation Manual	W208
C200H-OV001 Voice Unit Operation Manual	W172
WS02-CXPC1-E CX-Programmer User Manual	W361
CX-Server User Manual	W362
CX-Protocol Operation Manual	W344
CX-Simulator Operation Manual	W366
CS/CJ-series CQM1H-PRO01-E/CQM1-PRO01-E/C200H-PRO27-E Programming Consoles Operation Manual	W341

OMRON Corporation Industrial Automation Company Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V.Wegalaan 67-69. NL-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300 Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011 Fax: (65) 6835-2711

OMRON ELECTRONICS LLC One Commerce Drive Sc IL 60173–5302 U.S.A. mburg, Tel: (1) 847-843-7900 Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211. Bank of China Tower. 200 Yin Cheng Zhong Road, Pu Dong New Area, Shanghai, 200120, China Tel: (86) 21–5037–2222 Fax: (86) 21-5037-2200

Note: Specifications subject to change without notice. Printed in China

OMRON

sysmac CS シリーズ

安全上のご注意

このたびは、当社のプログラマブルコントローラ (PLC) をお買 い求めいただきまして誠にありがとうございました。 安全にご使用いただくために、本紙とPLC 本体のマニュアルお よび当該ユニットの参照マニュアルを必ずお読みください。 参照マニュアルは、当社の最寄りの営業所に連絡し、最新のもの をお使いください。

また、本紙と参照マニュアルは、大切に保管していただくととも に、最終ユーザ様までお届けくださいますようお願いいたしま す。

オムロン株式会社

© OMRON Corporation 2002-2012 All Rights Reserved. 0675177-0B

安全上のご注意

●警告表示の意味

///注意

誤った取り扱いをすると、人が障害を負ったり、物的 損害の発生が想定される内容を示します。

●警告表示

⚠警告

通電中は、ユニットを分解したり内部に触れたりしないでください。 感電の恐れがあります。

通電中は、端子に触れないでください。 感電の恐れがあります。

プログラマブルコントローラ(CPUユニットおよび各ユニットを含む ー以下、PLCといいます)の故障やPLCの外部要因による異常が発生 した場合も、システム全体が安全側に働くように、PLCの外部で安全

対策を施してください。

異常動作により、重大な事故につながる恐れがあります。

- (1) 非常停止回路、インターロック回路、リミット回路など、安全保護 に関する回路は、必ずPLC 外部の制御回路で構成してください。
- (2) PLCは、自己診断機能で異常を検出したときや、運転停止故障診断 (FALS)命令を実行したとき、運転を停止して全出力をOFFします。 このとき、システムが安全側に動作するよう、PLC 外部で対策を 施してください。
- (3) 出力リレーの溶着や焼損、出力トランジスタの破壊などによって、
 PLC の出力がON またはOFF になったままになることがあります。
- このとき、システムが安全側に動作するよう、PLC 外部で対策を 施してください。
- (4) PLCのDC24V出力(サービス電源)が過負荷の状態または短絡されると、電圧が降下し、出力はOFFとなることがあります。 このとき、システムが安全側に動作するよう、PLC外部で対策を施してください。



サイクルタイムが延びても影響がないことを確認してから、オンライ ンエディットをしてください。 入力信号を読み取れないことがあります。 他ノードヘプログラムを転送するときや、I/Oメモリを変更する操作 をするときは、変更先ノードの安全を確認してから行ってください。 けがをする恐れがあります。

AC電源の端子台ねじは参照マニュアルで指定した規定トルクで締め てください。 ねじが緩むと発火および誤動作の恐れがあります。

通電中や電源を切った直後は、電源ユニットに触れないでください。 火傷の恐れがあります。

直流電源を配線するときは、+/ー極性に注意してください。 接続を誤ると、システムが異常動作をする恐れがあります。

IOWR命令による本ユニットの設定(再設定)を行う場合は、作成し たラダープログラムおよびデータは十分な動作確認を行ったうえで 本運転を行ってください。 設定データに不正がある場合、本ユニットは運転を停止し、装置や機 械が想定外の動作をする恐れがあります。

お願い

- ●外部配線の短絡に備えて、ブレーカなどの安全対策を施してください。
- ●端子台、コネクタを十分確認してから装着してください。
- ●PLCのベース取り付けネジ、端子台のネジ、ケーブルのネジは、参照マニュ アルで指定した規定トルクで締めてください。
- ●参照マニュアルに示すとおり、正しく配線してください。
- ●参照マニュアルで指定した電源電圧で使用してください。
- ●電源事情が悪い場所では特に、定格の電圧や周波数の電源が供給できるよう にしてご使用ください。
- ●配線の際は、ワイヤくず混入防止のため、ユニット上面の防塵ラベルを貼ったまま配線してください。
- ●配線完了後は、放熱のため、防塵ラベルを外してご使用ください。
- ●配線は、圧着端子を付けてください。撚り合わせただけの電線を直接、端子 台に接続しないでください。
- ●入力ユニットには、定格入力電圧を超える電圧を印加しないでください。
- ●出力ユニットは、最大開閉能力を超える電圧の印加および負荷の接続をしないでください。
- ●据え付け工事の際には、必ずD種接地(第3種接地)をしてください。
- ●端子台、コネクタ、メモリユニット、増設ケーブルなどロック機構のあるものは、必ずロックしていることを確認してからご使用ください。
- ●耐電圧試験は、機能接地端子を外して行ってください。
- ●配線、スイッチなどの設定を十分確認してから通電してください。
- ●バッテリレス運転は、PLCシステム設定の「電池異常検出の有無設定」を「検 出しない」に設定後実施してください。
- ●運転を開始する前に、ディップスイッチやデータメモリ (DM) が正しく設定 されていることを確認してください。
- ●作成したユーザープログラムは、十分な動作確認を行った後、本運転に移行してください。
- ●運転再開に必要なデータメモリや保持リレーの内容、プログラム、パラメー タおよびデータは、交換したCPUユニット、高機能I/Oユニットに転送して から運転を再開してください。
- ●電源OFF時には、次回電源ON時の各ユニットの動作モードに問題がないこ とを確認してください。
- ●本製品を分解して修理や改造をしないでください。
- ●次のことを行うときは、PLC本体の電源をOFFにしてください。
- ・電源ユニットやI/Oユニット、CPUユニット、メモリカセットを着脱する とき
- ・装置を組み立てるとき
- ・ディップスイッチやロータリスイッチを設定するとき
- ・ケーブルを接続、配線するとき
- ・コネクタを取り付けたり、取り外したりするとき
- ●次の操作は設備に影響がないかを確認した上で行ってください。
- ・PLCの動作モード切り換え
- ・接点の強制セット/リセット
- ・現在値や設定値の変更
- ●ケーブルを無理に曲げたり、引っ張ったりしないでください。
- ケーブルやコードにものを載せないでください。
- ●部品を交換する際は、必ず定格が正しいことを確認した上で交換してください。
- ●電池交換は対象ユニットのマニュアルを参照して行ってください。
- ●接地された金属に触れるなどして人体の静電気を放電させてから、ユニット に触れてください。
- ●運搬や保存時は、LSI、ICなどの静電気による破壊防止のため、回路基板を導 電性のもので覆い、保存温度範囲に保ってください。
- ●回路基板には電気部品のリードなど鋭利な部分がありますので、部品実装部 や基板の裏面に直接手を触れないでください。

- ●コネクタの組み立て配線は、ピン番号を十分確認してから行ってください。
 ●配線は指示された方法で行ってください。
- ●接続ケーブルは各ユニットのマニュアルに記載されている専用ケーブルを 使用してください。市販の一般パソコン用RS-232Cケーブルを使用すると、 外部機器およびCPUユニットが故障する恐れがあります。
- ●機種によって電源投時の動作モードが異なります。詳細は各マニュアルを参照してください。

正しい使い方

- ●参照マニュアルに示す通り、正しく設置してください。
- ●次のような環境には設置しないでください。
- ・日光が直接当たる場所

0

Q

- ・周囲温度や相対湿度が仕様値の範囲を超える場所
- ・温度の変化が急激で結露するような場所
- ・腐食性ガス、可燃性ガスのある場所
- ・ちり、ほこり、塩分、鉄粉が多い場所
- ・水、油、薬品などの飛沫がかかる場所
- ・本体に直接振動や衝撃が伝わる場所
- ●次のような場所で使用する際は、遮蔽対策を十分に行ってください。
 - ・静電気などによるノイズが発生する場所
- ・強い電界や磁界が生じる場所
- ・放射能を被曝する恐れのある場所
- ・電源線が近くを通る場所

ご使用に際してのお願い

次に示すような条件や環境で使用する場合は、定格、機能に対して余裕を持っ た使い方やフェールセーフなどの安全対策へのご配慮をいただくとともに、当 社営業担当者までご相談くださいますようお願いいたします。

- (1)参照マニュアルに記載のない条件や環境での使用
- (2)原子力制御・鉄道施設・航空施設・車両・燃焼装置、医療機器、娯楽機械、 安全機器、石油化学プラントなどへの使用
- (3) 人命や財産に大きな影響が予想され、特に安全性が要求される用途への使 用

■参照マニュアル

形式/	「マニュアル名称	マニュアルNo.
CS1G/H-CPU	ユーザーズマニュアル セットアップ編	SBCA-301
CS1D-CPU	デュプレックスシステム ユーザーズマニュアル セットアップ編	SBCA-318
CS1G/H-CPU -V1	ユーザーズマニュアル プログラミング編	SBCA-313
CS1G/H-CPU	コマンドリファレンス	SBCA-302
	通信コマンドリファレンス	SBCA-304
CJ1G/H-CPU H CS1W-SCB21/41(-V1)	シリアルコミュニケーションボード	
		SBCD-300
CS1W-SCU21(-V1)	シリアルコミュニケーションユニット	0000.007
CS1W-ETN01/11	イーサネットユニット	SBCD-307
DeviceNet	ユーザーズマニュアル	SCCC-308
CS1W-DRM21	DeviceNetユニット	SBCD-314
C200HW-DRM21-V1	DeviceNetマスタユニット	SBCD-312
C200HW-DRT21	DeviceNetスレーブユニット	SBCD-305
C200HW-SRM21-V1 CS1W-SRM21	CompoBus/Sユニット	SCCC-307
C200H-LK401	PCリンクユニット	SBCC-325
C200H-RM001-PV1	SYSBUSリモートI/O関連ユニット	SBCC-404
C200H-RT001/002-P	(光タイプ)	0200 101
C200H-RM201	SYSBUSリモートI/O関連ユニット	SBCC-413
C200H-RT201/202	(ワイヤタイプ)	0000 110
CS1W-CLK23	Controller Linkユニット	SCCC-326
CS1W-CLK21-V1	(ワイヤタイプ)	0000 020
CS1W-CLK12(-V1)(光リン グタイプH-PCFケーブル) CS1W-CLK52(-V1)(光リン グタイプGIケーブル)	Controller Linkユニット	SBCD-311
C200HW-ZW3DV2-V2	Controller Link サポートソフト	SBCD-310
C200HW-JRM21	JPCN-1ユニット	SCCC-343
C200HW-ZW3PC3	JPCN-1 サポートツール	5000-040
CS1W-NXS01/11	NXサービスユニット	SBCD-323
C200H-ID501/215	多点入出力ユニット	SBCC-420
CS1W-HI001/HCP22	カスタマイザブルカウンタユニット	
/HCA22	ユーザーズマニュアル	SBCC-827
	コマンドリファレンス	SBCC-828
CS1W-HCA12-V1/HI001-V1 /HCP22-V1/HCA22-V1	カスタマイザブルカウンタユニット ユーザーズマニュアル	SBCC-833
CS1W-PTS //PTW01/PDC01 /PTR //PPS01/PMV01	プロセス入出力ユニット	SBCC-826

π4-4		
	た/マニュアル名称	マニュアルNo.
CS1W-LC001	ループコントロールユニット	
	ユーザーズマニュアル	SBCC-821
	計器ブロックリファレンスマニュアル	SBCC-822
CS1W-LCB01/05	ループコントロールボード	
	ユーザーズマニュアル	SBCC-834
	計器ブロックリファレンスマニュアル	SBCC-835
WS02-LCTC1-J	CX-Process	
	ツールソフト オペレーションマニュアル	SBCC-823
	モニタソフト オペレーションマニュアル	SBCC-824
CS1W-GPI01	GP-IBインタフェースマニュアル	SBCC-832
CS1W-AD041(-V1)/081(-V1)		
CS1W-DA041/08V/08C	アナログ入力ユニット	
CS1W-MAD44	アナログ出力ユニット	SBCC-820
CJ1W-AD041-V1/081(-V1)	アナログ入出力ユニット	0000020
CJ1W-DA021/041		
C200H-AD003	アナログ入力ユニット	
C200H-AD003 C200H-DA003/004	ア ブ ロ ク ス ガ ユ ニ ッ ト ア ナ ロ グ 出 力 ユ ニ ッ ト	0000 220
C200H-DA003/004 C200H-MAD01	アテロク田刀ユニット アナログ入出力ユニット	SCCC-338
C200H-AD001/002	アナログ入力ユニット	SBCC-571
C200H-DA001/002	アナログ出力ユニット	
C200H-TS	温度センサユニット	SBCC-422
C200H-TC	温度調節ユニット	SBCC-534
C200H-TV	加熱冷却制御ユニット	SBCC-554
C200H-PID01 ~ 03	PID制御ユニット	SBCC-555
CS1W-CT021/041		SBCC-829
C200H-CT021	高速カウンタユニット	SCCC-311
C200H-CT001-V1/002		SBCC-405
CS1W-NC113/213/413		0005 011
/133/233/433		SBCE-311
C200HW-NC113/213/413		SCCC-344
C200H-NC111	位置制御ユニット	SBCC-406
C200H-NC112		SBCC-423
C200H-NC211		SBCC-446
C200H-CP114	カムポジショナユニット	SBCC-535
CS1W-MC421/221	モーションコントロールユニット	SBCE-306
C200H-MC221	モーションコントロールユニット	3D0L-300
020011-100221	違入編	
	(学入)編 解説編	SCCC-314
C200H-ASC02	月午 百元 前冊	SCCC-315
	ASCIIユニット	SBCC-442
C200H-ASC11/21/31		SCCC-324
C200H-IDS01-V1/21	IDセンサユニット	SBCC-437
C200H-FZ001	ファジィ推論ユニット	SBCC-492
C200H-0V001	音声ユニット	SBCC-453
WS02-CXPC1-JV2	CX-Programmer(Ver. 2.0)	SBCA-305
WS02-CXPC1-JV3	CX-Programmer(Ver. 3.0)	SBCA-316
	CX-Net Ver. 1.6	SBCA-306
CXONE-AL	CX-Protocol	SBCA-307
/AL_D-V		000A-007
CXONE-AL C-V	CV Simulator	0004 010
/ALD-V_	CX-Simulator	SBCA-310
CQM1H-PR001		
CQM1-PR001	プログラミングコンソール	SBCA-303
C200H-PR027		220.000
02001111027		

オムロン株式会社

インダストリアルオートメーションビジネスカンパニー



お断りなく仕様などを変更することがありますのでご了承ください。