

サイクルタイムが延びても影響がないことを確認してから、オンライン

エディットしてください。入力信号を読取れないことがあります。

適合規格について

欧州EC指令に適合しています。 FMC 規格·FN 61000_6_2 EN 61000-6-4 21Ⅱ規格について UL (Underwriter's Laboratories Inc.)の認証を受けています。



下記の(1)または(2)の回路に接続してご使用ください。 (1)制限電圧電流回路(UL508で認定されたもの) 最大電圧(無負荷時):30Vrms(42.4Vピーク)以下 おトバ ・最大電流:①8A以下(短絡時を含む)または

②下表の定格を持つ回路保護器(ヒューズ等)で制限されて いる場合

無負荷電圧(Vピーク)	最大電流定格(A)	
0~20	5.0	
20を超え30まで	<u>100</u> ピーク電圧値	

(2)UL1310に従うクラス2電源ユニットまたはUL1585に従うクラス2トラン スを電源とする最大電圧30Vrms(42.4Vピーク)以下の回路 (クラス2回路) (3)定格周囲温度は、55℃である。

安全上の要点

1. 信号の断線、瞬時停電による異常信号などに備えて、ご使用者側でフェールセーフ対 策を施してください。

- 2. ユーザーズマニュアルで指定した電源電圧で使用してください。
- 3. 電源事情が悪い場所では特に、定格の電圧や周波数の電源が供給できるようにして ご使用ください。
- 4. 外部配線の短絡に備えて、ブレーカーなどの安全策を施してください。
- 5. 入力部は、定格入力電圧を超える電圧を印加しないでください
- 6. 出力部は、最大開閉能力を超える電圧の印加および負荷の接続をしないでください。 7. 次のことを行うときは、PLC本体の電源をOFFにしてください。
- ・電源ユニット、I/Oユニットなどの各種ユニットやCPUユニット、メモリカセットの着脱 ・装置の組み立て
- ・ディップスイッチやロータリスイッチの設定
- ・ケーブルの接続、配線
- 8.形CS1W-V680C1□:PLCのベース取り付けねじ、端子台のねじ、ケーブルのねじは、本 書およびユーザーズマニュアルで指定した規定トルクで締めてください。 取付け時のねじ締めトルクは、0.4N·mで確実に固定してください
- 9. 複数のアンテナを隣接設置される場合、相互干渉により交信性能が低下する恐れがあ りますので、「タグ・アンプユーザーズマニュアル(EEPROMタイプ)(カタログ番号: SCHI-709)|、「タグ・アンプユーザーズマニュアル(FRAMタイプ)(カタログ番号:
- SCHI-707)」を参照し、アンテナ間の相互干渉がないことを確認して設置してください。 10. 本書およびユーザーズマニュアルで示すとおり正しく配線してください。
- 11. 本製品を分解して修理や改造をしないでください。
- 12. 運転開始の前にディップスイッチ、データメモリ(DM)が正しく設定されていることを確認し てください
- 13. ユニット内に配線クズや切粉などが入らないようにしてください。焼損、故障、誤動作の 原因となります。特に施工時は覆いを付けるなどの対策を行ってください。
- 14. ユニット開口部から異物を入れないでください。焼損、感電、故障の可能性があります。 15. 出荷時からユニット上部に防磨ラベルが貼ってある場合は、通電前に必ずラベルを外し
- てください。放熱できず、誤動作の可能性があります。 16. ケーブルやコードを無理に引っ張ったり曲げたりしないでください。
- 17.ケーブルやコードの上にものを載せないでください。
- 18. 端子台を十分に確認してから装着してください。
- 19. 端子台、メモリユニット、増設ケーブルなどロック機構のあるものは必ずロックしていること を確認してからご使用ください。
- 20. 作成したユーザプログラムは、十分な動作確認を行った後、本運転に移行してください。
- 21. 配線を十分に確認してから通電してください。
- 22. 次のことを行うときは、設備に影響がないことを確認してください。
- PLC動作モードの変更
 - ・ 接点の強制セット/リセット
 - ・設定値、現在値の変更
- 23. 接地された金属に触るなどして人体の静電気を放電させてから、ユニットに触れてください。 24. 形CS1W-V680C12は、外部よりDC24Vを入力する必要がありますが、ご使用される電 源は強化絶縁(2重絶縁)された電源をお使いください。
- 25. 形CS1W-V680C12をご使用になる場合、外部入力のDC電源は、定格の電源電圧 (DC24V +10% -15%)内であることを確認してご使用ください。
- 26. 電源の逆接続はしないでください。
- 27.ケースの隙間から水や針金を入れないでください。火災や感電の原因となります。
- 28. 万一、製品に異常を感じたときには、すぐに使用を中止し、電源を切った上で、当社支店 ・営業所までご相談ください
- 29. 本製品を廃棄する際は、産業廃棄物として処理してください。
- 30. 清掃時、シンナー、ベンゼン、アセトン、灯油はご使用しないでください。

参照マニュアル				
マニュアルNo.	形式	マニュアル名称	記載内容	
SCHI-711	形CS1W-V680C1□ 形CJ1W-V680C1□	SYSMAC CJ/CSシリーズ ID センサユニット ユーザーズマニュアル	SYSMAC CJ/CSシリーズのIDセンサユニットの使用方法について記載して います。	
SDGR-703	形CJ1W-V680C1□	CJシリーズ IDセンサユニット ユーザーズマニュアル NJ接続編	CJシリーズ IDセンサユニットをNJシリーズCPUユニットで使用するために 必要な情報について記載しています。	
SCHI-709	形V680-HS52 形V680-HS63 形V680-HS65 形V680-D1KP□	RFIDシステム形V680シリーズ タグ・アンプ ユーザーズマニュアル(EEPROM)	RFIDシステム形V680シリーズのアンテナおよびEEPROMタイプタグの 使用方法について記載しています。	
SCHI-707	形V680-HS52 形V680-HS63 形V680-HS65 形V680-D□□KF□	RFIDシステム形V680シリーズ タヴ・アンプ ユーザーズマニュアル(FRAM)	RFIDシステム形V680シリーズのアンテナおよびFRAMタイプタグの 使用方法について記載しています。	
SCHI-703	形V680-H01 形V680-D1KP58HT	耐熱用途RFIDシステム 形V680シリーズ ユーザーズマニュアル	耐熱用途RFIDシステムのアンテナ形V680-H01および、 タグ形V680-D1KP58HTの使用方法について記載しています。	
SBCA-301	形CS1 -CPU -H 形CS1 -CPU -V1	SYSMAC CSシリーズ ユーザーズマニュアル セットアップ編	SYSMAC CSシリーズの概要、仕様、設置、保守などの方法に関して記載 しています。	
SBCA-349	形CJ2二-CPU 二 形CJ2二-CPU 二 形CJ2二-CPU 二-EIP	SYSMAC CJシリーズ CJ2 CPUユニット ユーザーズマニュアル ハードウェア編	SYSMAC CJシリーズ CJ2 CPUユニットの概要、仕様、設置、保守などの 方法に関して記載しています。	
SBCA-350		SYSMAC CJシリーズ CJ2 CPUユニット ユーザーズマニュアル ソフトウェア編	SYSMAC CJシリーズ CJ2 CPUユニットの機能の使い方について記載して います。	
SCBA-312	形CJ1H-CPU □□-H-R 形CJ1□-CPU □□-EIP	SYSMAC CJシリーズ ユーザーズマニュアル セットアップ編	SYSMAC CJシリーズの概要、仕様、設置、保守などの方法について記載して います。	
SCBA-313	#CS1 -CPU -CPU #CS1 -CPU -V1 #CJ1 -CPU -D #C11 -CPU -D #C11 -CPU -D #C11 -CPU -D #C11 -CPU -D	SYSMAC CS/CJシリーズ ユーザーズマニュアル プログラミング編	SYSMAC CS/CJシリーズの機能の使い方について記載しています。	
SBCA-351	形CS1CPU	SYSMAC CS/CJシリーズ コマンドリファレンス	SYSMAC CS/CJシリーズの命令語の使い方について記載しています。	
SBCA-346	形CXONE-AL□□C/D-V□	FA統合ツールパッケージ CX-One セットアップマニュアル	FA統合ツールパッケージCX-Oneのセットアップ方法、操作方法について	
SBCA-347		CX-Integrator オペレーションマニュアル	説明しています。	
SBCA-337	形WS02-CXPC□-V□	CX-Programmer オペレーションマニュアル	プログラミングツールCX-Programmerの操作方法について説明しています。	
SBCA-303	形CQM1H-PR001 形CQM1-PR001 形C200H-PR027	プログラミングコンソール オペレーションマニュアル	SYSMAC CS/CJシリーズのプログラミングコンソールの操作方法について 記載しています。	
SBCA-358	形NJ□□□-□□□□ 形NJ-P□3001	NJシリーズ CPUユニット ユーザーズマニュアル ハードウェア編	NJシリーズ CPUユニットの概要、仕様、設置、保守などの方法に関して 記載しています。	
SBCA-359		NJシリーズ CPUユニット ユーザーズマニュアル ソフトウェア編	NJシリーズ CPUユニットの機能の使い方について記載しています。	
SBCA-360	形NJ	NJシリーズ コマンドリファレンス編	NJシリーズの基本的な命令語の使い方について記載しています。	
SBCA-362	形SYSMAC-SE2	Sysmac Studio Version 1 オペレーションマニュアル	プログラミングツールSysmac Studioの操作方法について説明しています。	

使用上の注意

- 本書およびユーザーズマニュアルに示す通り、正しく設置してください。
- 2. 次のような場所では使用および保管しないでください
- ・日光が直接あたス場所
- ・周囲温度や相対湿度が仕様値の範囲を超える場所
- ・温度の変化が急激で結露するような場所 ・ 麻食性ガス 可燃性のガスのある場所
- ・ちり、ほこり、塩分、鉄粉が多い場所
- ・水、油、薬品などの飛沫がかかる場所
- 本体に直接振動や衝撃が伝わる場所
- 3. 次のような場所で使用する際は、遮蔽対策を十分に行ってください。
- 静電気などによるノイズが発生する場所
- ・強い電解や磁界が生じる場所
- ・放射能を被曝する恐れのある場所
- 電源線が近くを通る場所

取り付け方法

(1)ユニット裏面上部の固定用ツメをベースユニットに引っかけ、コネク タが正しく嵌合するように押し付けます。 (2)ユニット下部のねじを+ドライバで締めます

締め付けは3.5in.lb. (0.4N·m)のトルクで行ってくださ



(3)外部電源供給の配線について(CS1W-V680C12のみ) AWG18~26を使用し、締め付けは5.1in.lb. (0.58N·m)のトルクで行って ください

肉定えジ

- CJ1W-V680C1
- (1)CJシリーズの各ユニットのコネクタをかみ合わせ、ユニット上部およ びユニット下部のスライダーで各ユニットをロックします。 (2)DINレールにA部を引っかけ、B方向に押して装着します



- 接続可能アンテナ・アンプ
 - アンテナユニット : V680-H01-V2 (C□1W-V680C11のみ接続可) アンプ ユニット : V680-HA63A、V680-HA63B

I⊞[™]0120-919-066 携帯電話・PHS・IP電話などではご利田いただけませんので 下記の電話番号へおかけください 電話 055-982-5015(通話料がかかります)

ご承諾事項

当社商品は、一般工業製品向けの汎用品として設計製造されています。従いまして、次に

掲げる用途での使用を意図しておらず、お客様が当社商品をこれらの用途に使用される際

には、当社は当社商品に対して一切保証をいたしません。ただし、次に掲げる用途であって

(a) 高い安全性が必要とされる用途(例:原子力制御設備、燃焼設備、航空・宇宙設備、鉄

(b) 高い信頼性が必要な用途(例:ガス・水道・電気等の供給システム、24時間連続運転

(c) 厳しい条件または環境での用途(例:屋外に設置する設備、化学的汚染を被る設備、

*(a)から(d)に記載されている他、本カタログ等記載の商品は自動車(二輪車含む。以下同

じ)向けではありません。自動車に搭載する用途には利用しないで下さい。自動車搭載

*上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシート等最新版

のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。

オムロン株式会社 インダストリアルオートメーションビジネスカンパニー

道設備、昇降設備、娯楽設備、医用機器、安全装置、その他生命・身体に危険が及び

も当社の意図した特別な商品用途の場合や特別の合意がある場合は除きます。

システム、決済システムほか権利・財産を取扱う用途など)

電磁的妨害を被る設備、振動・衝撃を受ける設備など)

用商品については当社営業担当者にご相談ください。

(d) カタログ等に記載のない条件や環境での用途

●製品に関するお問い合わせ先

■営業時間:8:00~21:00 ■営業日:365日

●FAXやWebページでもお問い合わせいただけます。

FAX 055-982-5051 / www.fa.omron.co.ip

●その他のお問い合わせ

お客様相談室

うる用途)

納期・価格・サンプル・仕様書は貴社のお取引先、または貴社 担当オムロン販売員にご相談ください。 オムロン制御機器販売店やオムロン販売拠点は、Webページで ご案内しています。

A (V) 2014年7月

CS1W-V680C1







INSTRUCTION SHEET

NOTICE:

This product meets CISPR11 class A. The intended use of this product is in an industrial environment only.

TRACEABILITY INFORMATION: Importer in EU : Manufacturer

Monton Europe B.V. Omron Corporation, Wegalaan 67-69 Shiokoji Horikawa, Shimogyo-ku, 2132 JD Hoofddorp, Kyoto 600-8530 JAPAN The Netherlands

Notice:

This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

© OMRON Corporation 2007 All Rights Reserved.

Sefety Precautions

Definition of Precautionary Information

 MARNING
 Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

 A CAUTION
 Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate

CAUTION if not avoided, may result in n injury or in property damage.

Warning

\land WARNING

Never attempt to disassemble any Units while power is being supplied. Doing so may result in serious electrical shock or electrocution.

Never touch any of the terminals while power is being supplied. Doing so may result in serious electrical shock or electrocution.

Provide safety measures in external circuits, I.e., not in the PLC (CPU Unit including associated Units), in order to ensure safety in the system if an abnormality occurs due to malfunction of the PLC or another external factor affecting the PLC operation. Not doing so may result in serious accidents.

 Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits.
 The PLC will turn OFF all outputs when its self-diagnosis function

detects any error or when a severe failure alarm (FALS) instruction is executed. As a countermeasure for such errors, external safety measures must be provided to ensure safety in the system. •The PLC outputs may remain ON or OFF due to deposition or burning

of the output relays or destruction of the output transistors, As a countermeasure for such problems, external safety measures must be provided to ensure safety in the system.

This product is not designed for use in directly or indirectly detecting human bodies in safety-related applications. Do not use the product as a sensing device for human protection.

▲ CAUTION

Execute online edit only after confirming that no adverse effects will be caused by extending the cycle time. Otherwise, the input signals may not be readable.

Applicable Standards

1. EMC Standards The product has conformed to the European EMC directive. Harmonized standards : EN 61000-6-2 and EN 61000-6-4 2 UII Standards

The product has been certified by UL (Underwriters Laboratories Inc.). UL508



Use the product connected to one of the following two circuits.

(1) Limited Voltage/Current Circuit (Approved in UL508) A circuit that uses as its power supply the secondary coil of an insulated transformer that satisfies the following conditions: Maximum voltage (with no-load).30 Vrms (42.4 V peak) OR

 Maximun current: (1) 8A (including when shorted) OR
 (2) A current restricted by a circuit protective device (e.g., fue) with the following restinger

ruse) with the following ratings				
No-load voltage (V peak)	Maximum current rating (A)			
0 to 20	5.0			
Over 20 to 30	100			
	Peak voltage			

 A circuit with a maximum voltage of 30 Vrms (42.4 V peak) that uses as its power supply a Class 2 power supply defined in UL1310 or a Class 2 transformer defined in UL1585.
 Environmental - Rated 55[°]C surrounding air.

Precautions for Safe Use

- Fail-safe measures must be taken by the customer to ensure safety in the event that outputs from Output Units remain ON as a result of internal circuit failures, which can occur in relays, transistors, and other elements.
- Always use the power supply voltages specified in the operation manuals. An incorrect voltage may result in malfunction or burning.
- Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied in places where the power supply is unstable. An incorrect power supply may result in malfuncion.
- Install external breakers and take other safety measures against short-circuiting in external wiring. Insufficient safety measures against short-circuiting may result in burning.
- Do not apply voltages to the Input Units in excess of the rated input voltage. Excess Voltages may result in burning.
- 6. Do not apply voltages or connect loads to the Output Units in excess of the maximum switching capacity. Excess voltage or loads may result in burning.
- Always turn OFF the power supply to the PLC before attempting any of the following. Performing any of the following with the power supply turned ON may lead to electrical shock:
- Mounting or removing any Units (e.g. Power Supply Unit, I/O Units, CPU Unit, etc.) or Memory Cassettes.
- Assembling any devices or racks.
- · Setting DIP switches or rotary switches.
- Connectiong or disconnecting any cables or wiring.
- 8. Be sure that all the mounting screws, terminal screws, and cable connector screws are tightened to the torque specified in the relevant manuals. Incorrect tightening torque may result in matinerion
- Tighten screws to 0.4 N*m when mounting the product.
- 9. If multiple Antennas are mounted near each other, communications performance may
- decrease due to mutual interference. Refer to Installing Antennas in the V680 Series User's Manual for Amplifiers, Antennas, and ID Tags (Cat. No. Z262, Z248) and check to make sure there is no mutual interference.
- 10. Install the Units properly as specified in the operetion manuals. Improper installation of the Units may result in malfunction.
- 11. Do not attempt to take any Units apart, to repair any Units, or to modify any Units in any way. 12. Check switch settings, the contents of the DM Area, and other preparations before starting
- operation. Starting operation without the proper settings or data may result in an unexpected operation.
- 13. Do not allow wire clippings, shavings, or other foreign material to enter any Unit. Otherwise, Unit burning, failure, or malfunction may occur. Cover the Units or take other suitable countermeasures, especially during wiring work.
- Do not allow foreign matter to enter the openings in the Unit. Doing so may result in Unit burning, electric shock, or failure.
- 15. Always remove any dustproof labels that are on the top of the Units when they are shipped before you turn on the power supply. If the labels are not removed, heat will accumulate and malfunctions may occur.
- 16. Observe the following precautions when wiring cables.
 Do not bend the cables past their natural bending radius.
 - Do not pull on the cables.
- 17. Do not place heavy objects on top of the cables.
- 18. Check terminal blocks sufficiently before mounting them.
- 19. Be sure that the terminal blocks, Memory Units, expansion cables, and other items with locking devices are properly locked into place, Improper locking may result in malfuntion.

20. Check the user program for proper execution before actually running it on the Unit. Not checking the program may result in an unexpected operation.

- Check all wiring carefully before turning ON the power supply.
 Confirm that no adverse effect will occur in the system before attempting any of the
- following. Not doing so may result in an unexpected operation. • Changing the operating mode of the PLC.
- Force-setting / force-resetting any bit in memory.
- · Changing the present value of any word or any set value in memory.
- 23. Before touching a Unit, be sure to first touch a grounded metallic object in order to discharge
- any static build-up. Not doing so may result in malfuncion or damage. 24. Confirm the power supply is Reinforced Insulation(Double Insulation) for the CS1W-V680C12.
- Confirm the power supply is realisted instantial power supply of the Correction of the Co
- 26. Do not reverse polarity when connecting the power supply.
- 27. Do not allow water to enter or insert wire in the gaps of the case. Fire or electric shock may result.
- If you suspect that anything is wrong with the product at any time, stop using it immediately, turn OFF the power supply, and consult with your OMRON representative.
 When disposing of the product dispose of it as industrial waste.
- When disposing of the product, dispose of it as industrial wase.
 Do not use thinners, benzenes, acetones and kerosenes for cleaning

Precautions for Correct Use

- 1. Do not install and storage the product in the following locations.
 Where the PLC is exposed to direct sunlight.
- Where the ambient temperature or humidity is outside the ranges given in the Unit specifications.
- Where the PLC may be affected by condensation due to radical temperature changes Where there is any corrosive or inflammable gas.
- · Where there is excessive dust, saline air, or metal powder.
- Where the PLC is affected by vibration or shock.
 Where any water, oil or chemical may splash on the PLC.
- Provide proper shielding when installing in the following locations:
 Locations subject to static electricity or other sources of noise.
 Locations subject to strong electromagnetic fields.
 Locations subject to possible exposure to radiation.
 Locations near to power supply lines.

3. The operating environment of the PLC System can have a large effect on the longevity and raliability of the system. Improper operating environments can lead to malfunction, failure, and other unforeseeable problems with the PLC System. Be sure that the operating environment is within the specified conditions at installation and remains within the specified conditions during the life of the system.

Mounting method

• CS1W-V680C1

- (1) Hook the fixing claw at the top of the back side of the Unit onto the base unit and push it so that the connector is fit in correctly.
- (2) Tighten the screws at the bottom of the Unit with a Phillips type screwdriver. Tighten them to torque of 3 5in lb (0.4N m)



(3) Wiring external power supply (CS1W-V680C12 only)

- Use the AWG18 to 26 wire and tighten to torque of 5.1in.lb. (0.58N m).
- CJ1W-V680C1

(1) Align the connectors and press in firmly on the Units to connect them completely. Move the yellow sliders on the top and bottom of the Unit to the lock position to secure the Units. The sliders should click into place.

(2) When mounting the Units to DIN Rail, hook the Units at point A and then press in direction B.



 Connectable Antenna and Amplifier Antenna unit : V680-H01-V2 (connecting to C[]1W-V680C11 only) Amplifier unit : V680-HA63A and V680-HA63B

• Notice for Korea Radio Law A급 기기(업무용 방송통신기자재) 이 기기는 업무용(A급) 전자과적합기기로서 관매자 또는 사용자는 이 점을 주의하시기 바라며,가정외의 지역에서 사용하는 것을 목적으로 합니다.

Reference Manuals

Cat No.	Name				
Z271	SYSMAC CS/CJ Series CS1W-V680C1 /CJ1W-V680C1 V680 Series ID Sensor Units User's Manual				
Z317	CJ series CJ1W-V680C1 ID Sensor Units Operation Manual for NJ-series CPU Unit				
Z262	RFID System V680 Series User's Manual for Amplifiers, Antennas, and ID Tags (EEPROM)				
Z248	RFID System V680 Series User's Manual for Amplifiers, Antennas, and ID Tags (FRAM)				
Z221	Heat-resistive RFID System V680 Series User's Manual				
W339	SYSMAC CS Series CS1G/H-CPU H, CS1G/HCPU -EV1 Programmable Controllers Operation Manual				
W472	SYSMAC CJ Series CJ2H-CPU6 -EIP, CJ2H-CPU6, CJ2M-CPU CJ2 CPU Unit Hardware user's Manual				
W473	SYSMAC CJ Series CJ2H-CPU6 -EIP, CJ2H-CPU6, CJ2M-CPU CJ2 CPU Unit Software Manual				
W393	SYSMAC CJ Series CIH-CPU H-R, CJIG/H-CPU H, CJIG-CPU CJIC, CJIM-CPU H, Programmable Controllers Operation Manual				
W394	SYSMAC CS Series CSIGH-CPU_EV1, CSIGH-CPU_H, CSID-CPU_H, CSID-CPU_S SYSMAC CI-Series CIIH-CPU_H-R, CIIG-CPU_, CJIG/H-CPU_DH, CJIG-CPU_P, CJIM-CPU_P Programmidg Manual				
W474	SYSMAC CS Series CS1CPU SYSMAC CJ-Series (22H-CPU6_EV1, C12H-CPU6_, CJ2M-CPU, C11CPU Programmable Controllers Instructions Reference Manual				
W463	CXONE-AL C-V4/AL D-V4, CXONE-LT C-V4 SYSMAC CX-One FA Integrated Tool Package Setup Manual				
W464	CXONE-AL C-V4/AL C-V4/				
W446	WS02-CXP-C -V SYSMAC CX-Programmer Operation Manual				
W341	SYSMAC CS/CJ Series CQM1H-PR001-E/CQM1-PR001-E/C200H-PR027-E Programming Consoles Operation Manual				
W500	NJ, NJ-P_3001 NJ-series CPU Unit Hardware User's Manual				
W501	NJNJ_series CPU Unit Software User's Manual				
W502	NJNJNJ-series Instructions Reference Manual				
W504	SYSMAC-SE2				

Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by listelf is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM. See also Product catalog for Warranty and Limitation of Liability.

OMRON Corporation Industrial Automation Company Tokyo, JAPAN Contact: www.ia.omron.com



OMRON ELECTRONICS LLC

Alexandra Technopark,

OMRON (CHINA) CO., LTD.

200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China

Room 2211, Bank of China Tower

Singapore 119967

D(\$) Oct. 2014

Tel: (49) 7032-811-0/Fax: (49) 7032-811-199

Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2),

Tel: (65) 6835-3011/Fax: (65) 6835-2711

Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

2895 Greenspoint Parkway. Suite 200

Hoffman Estates, IL 60169 U.S.A.