

安全上のご注意			
の取扱説明書 ような表示と語	では、F 己号で示	くための表示と意味について 3SJ-E/Bを安全にご使用いただくために、注意事項を次 しています。ここで示した注意事項は安全に関する重大 ので、必ず守ってください。表示と記号は次のとおりです。	
⚠警	告	正しい取扱いをしなければ、発生しうる危険のため に、軽傷・中程度の傷害を負ったり、万一の場合に は重症や死亡にいたる恐れがあります。また、同様 に重大な物的損害を受ける恐れがあります。	
図記号の意味	床		
\bigcirc	一般的	うな禁止を示します。	
0	一般的	りな指示を示します。	
A	感電0)可能性についての注意を示します。	
警告表示 用者について			
		▲警告	
F3SJ-E/Bの設置や設定、および機械制御システムへの組み込みは必ず 適切な訓練を受けた有資格者が実施してください。資格のない作業者が 実施すると正しく動作しなくなり、人体が検出されず、重傷を負う 恐れがあります。			
使用者は本書をよく読んで、設置手順、動作確認手順、およびメンテナンス 手順を十分に理解した上で使用してください。			
付ける機械について			
▲警告			
電気的制御による急停止が不可能な機械には適用できません。たとえば、フ レ回転クラッチを用いた機械プレスには使用しないでください。機械			

<u>安全上の要点</u>

以下に示すような項目は安全を確保する上で必要なことですので必ず守って ください 、次のような場所には設置しないでください。 -直射日光など、強い外乱光があたる場所 - 區羽口九など、強いかられたかめたる場 - 湿度が高く、結露する恐れがある場所 - オイルミストや腐食性ガスがある場所 -仕様で定められる以上の振動や衝撃が本体に伝わる場所 -水がかかる場所 -汚染度3以上の場所 - 接着剤を溶かすような油のかかる場所 ・負荷は、下記の項目すべてを満たすようにしてください。 短絡させない 定格以上の電流を流さない

製品を落下させないでください。 投光器と受光器の上下方向を合わせて設置してください。 ・使用している国の該当する廃棄物処理規則に従って廃棄してください。

・コードのコネクタを確実に締めてください。 ・コードのコネクタを確実に締めてください。 ・コードのコネクタを、他のコネクタに切り替える場合、コネクタ内部の導体が IP54以上で保護される構造としてください。

高圧線や動力線とF3SJ-E/Bの入出力線を同一配管で使用しないでくださ

・コードを専用コード以外で延長する場合、同等以上の性能のコードを使用して ください ・コードを延長する際は、仕様で定められた長さ(最大30m)の範囲内で延長を

行ってください。 ・スパッタなどの異物が付着するような環境ではスパッタからF3SJ-E/Bを保護

するカバーを装着ください。 ・PCツール「SDManager」(形F39-GWUM)やセッティングコンソール(形 F39-MC21)はF3SJ-A専用の設定ツールです。F3SJ-E/Bにこれら設定ツ

-ルを接続して使用しないでください。

<u>使用上の注意</u> 製品が動作不能、誤動作、または性能・機器への悪影響を防ぐため、以下のこ

とを守ってください ■保管·設置環境に

 次のような場所には保管・設置しないでください ・仕様で定められる以上の温度、湿度での長時間の保管、使用 ・本製品はクラスA機器です。家庭用環境において、本製品は電波障害を起こ

すことがあります。この場合は、責任者が十分な対策を講じてください。 F3SJE/Bを高度1000m以上で使用しないでください。

■配線・取りつけについて

記録は、必ず電源OFFの状態で行ってください。故障診断機能により、 F3SJ-E/Bが動作しなくなることがあります。

出力線を4247ラインに短絡させたままにしないでください。F3SJ-E/Bが故障 する原因となります。 通信線を専用コード(形F39-JD□□)以外で延長する場合は、同等以上の

性能のコード(ツイストペア線)を使用してください。シールドは0Vラインへ接続し てください。

すべての端子の信号名を確認し、正しく配線してください。 ・電源投入後に検出エリアに何も無い状態とし、安定表示灯が点灯することを 確認してください。

制御システムは、F3SJ-E/Bの電源投入後2秒以上経過してから作動させて ください

市販のスイッチングレギュレータを使用する場合、FG (フレームグランド端子) を接地してください。

検出幅が1105mmを超える場合、ユーザーズマニュアルに記載の外形寸法図 にしたがい、規定の数量、および位置にて中間金具をご使用ください。ご使用 されない場合、定格/性能を満たすことができません。

といいの「おいく」なるとする機器から離して設置してください。あるいは遮蔽 対策を十分に行ってください。

■清掃について ■ 何かに ノ・・マ シンナー、ペンジン、アセトン類は、樹脂部材やケース塗装を溶かしますので、使 用しないでください。

■検出体につい7

透明体、半透明体は検出できません。

定格/性能

形式	Easyタイプ	Basicタイプ	
項目	F3SJ-E	F3SJ-B	
最小検出物体	不透明 直径25mm		
光軸ピッチ	20mm		
検出幅(mm)	185~1105mm(8~54光軸)	185~2065mm(8~102光軸)	
検出距離(m)	0.2~7.0m		
応答時間	ON→OFF : 15ms以下、OFF→ON : 70ms以下		
電源投入後立ち上がり時間	2s以下		
電源電圧(Vs)	SELV/PELV 24VDC±20% (リップルp-p10%以下)		
制御出力(OSSD)	PNP トランジスタ出力 x 2.負荷電流200 mA以下,残留電圧2 V以下(コード延長による影響 除く)、漏れ電流 1 mA 以下、誘導性負荷2.2H以下 *1 許容容量負荷1µF *2		
補助出力	_	PNP トランジスタ出力× 1 負荷電流100mA以下 残留電圧2 V以下(コード延長による影響除く) 漏れ電流 1 mA 以下	
入力電圧	 テスト入力、リセット入力ともに ON電圧:Vs-3V~Vs *3(吸込電流3mA以下) OFF電圧:OV~1/2Vsまたはオープン*3 外部リレーモニタ入力 ON電圧:Vs-3V~Vs *3(吸込電流5mA以下) OFF電圧:OV~1/2Vsまたはオープン*3 	テスト入力、インターロック選択入力、リセット 入力、ミューティング入力ともに ON電圧:Vs-3V~Vs *3(吸込電流3mA以下) OFF電圧:OV~1/2Vsまたはオープン*3 外部リレーモニタ入力 ON電圧:Vs-3V~Vs *3(吸込電流5mA以下) OFF電圧:OV~1/2Vsまたはオープン*3	

*1. 誘導性負荷の値は、制御出力が頻繁に ON/OFF を繰り返す場合の最大値です。制御出力を 4Hz 以下で使用する場合は使用できる誘導性負荷の値が 大きくなります。

*2. 追加でコンデンサなどの容量性負荷を含む素子を接続する場合に考慮していただく値です。

*3. ここでのVsとは使用環境での電圧値です。

内部表示灯 Easy Basic 点灯/点滅 説明 点灯 入光量が出力ONしきい値の170%以上 STB 安定表示灯 点滅 外乱光や振動による出力OFF <受光器> <投光器> 点灯 緑:出力ON、赤:出力OFF 2 ON/OFF出力表示灯 ON/OFF 1 Λ 点滅 出力関連のエラー 点灯 ロックアウト中 ロックアウト表示灯 LOCKOUT 点滅 ロックアウト中、エラー発生側 14. 上端入光表示灯(青) 14. 上端入光表示灯(青) 点灯 電源投入中 電源表示灯 POWER 点滅 電源電圧/ノイズによるエラー 1. 安定表示灯(緑) 1. 安定表示灯(緑) 点滅 投光停止中 5 テスト表示灯 TEST 2. ON/OFF出力表示灯(緑/赤) 2. ON/OFF出力表示灯(緑/赤) 6 ミューティングエラー表示灯 MUTING ERROR 点滅 ミューティングエ 3. ロックアウト表示灯(赤) 3. ロックアウト表示灯(赤) 7 ミューティング入力1表示灯 MUTE1 点灯 ミューティング入力1がON 4. 電源表示灯(緑) 9. 通信表示灯(緑) 点灯 ミューティング入力2がON 8 ミューティング入力2表示灯 MUTE2 5. テスト表示灯(緑) 10. 構成表示灯(緑) 点灯 投受光間の通信成立 9 通信表示灯 сом 6. ミューティングエラー表示灯(緑) 11. 内部エラー表示灯(赤) 点滅 通信のエラー 7. ミューティング入力1表示灯(緑) 12. インターロック表示灯(黄) 10 構成表示灯 CFG 点滅 接続センサの形式構成がエラー 8. ミューティング入力2表示灯(緑) 13. 外部リレーモニタ表示灯(緑) 11 内部エラー表示灯 INTERNAL 点滅 内部のエラー 点灯 インターロック中 12 インターロック表示灯 INTERLOCK m 15. 下端入光表示灯(青) 15. 下端入光表示灯(青) 点滅 入力配線がエラー 点灯 外部リレーモニタ入力がON 13 外部リレーモニタ表示灯 EDM 点滅 外部リレーモニタがエラー 点灯 最上端の光軸が入光している 14 上端表示灯 тор 点滅 ミューティング/オーバーライド中 キャップ未接続エラー、連結エラー 点灯 最下端の光軸が入光している 15 下端表示灯 втм

入出力回路

+24V

0V

■オートリセットモード、外部リレーモニタ機能使用時の配線

■外部リレーモニタ機能を無効にする配線 外部リレーモニタ入力を補助出力へ短絡してください。

表示灯

回帰反射型の配置	反射板 反射板 検出エリアを90°曲	げる配置	\otimes
-E/Bに対してユーザ 検を実施してください。	ュアル「第5章 チ:	ェックリスト」	0
ャンサは通過させる 、体に反応してミュー			置し

0 重症を負う恐れがあります。 ミューティング入力には独立した2つの入力機器を使用してください。 0 ミューティング機能およびオーバーライド機能は装置の安全機能を無効にします。前記 の機能がはたらいているときの安全性については、別の手段にて確保してください。 オーバーライドを起動するスイッチには、パネ復帰式のキースイッチなどのホールド・トッ・ ラン装置を使用し、危険エリア全体が見え、かつ危険エリア内から操作できない位置 に設置してください。また、オーバーライドは必ず危険エリアに誰もいないことを確認し てから起動してください。

▲警告	
負荷は出力と0Vラインの間に接続してください(PNP出力)。誤って出力と +24Vラインの間に接続すると、動作モードが「しゃ光時ON」に反転 して危険です。	
出力線を+24Vラインに短絡させないでください。出力が常時ONとなり危険です。また、出力線の地絡によって出力がONとならないよう、 電源の0V側を接地してください。	-
必要な安全カテゴリの要求事項を満たすように適切な数の制御出力 を使用してシステムを構成してください。	,
F3SJ-E/Bの各ラインをDC24V+20%を超えるDC電源に接続しないで ださい。また、AC電源にも接続しないでください。感電、もしくは破壊の 可能性があり危険です。	
配線は、必ず電源OFFの状態で行ってください。	,
補助出力を安全用途に使用しないでください。 F3SJ-Bが故障しても人体が検出されず、重傷を負う恐れがあります。 ◇)
F3SJ-E/BがIEC61496-1およびUL508を満たすために、DC電源ユニ ッパは下記の項目すべてを満たすようにしてください。 ・定格の電源電圧内(DC24V±20%)である ・複数の装置に接続する場合には、各装置の総定格電流に対して余裕を 持たせる。 ・EMC指令適合(工業環境) ・一次回路、二次回路間が二重絶縁あるいは強化絶縁	

F3SJ-E/Bを設置後、機械が動作しない状態でF3SJ-E/Bが意じ おりに動作することを必ず確認してください。意図したとおりに設定 されていない場合、人体が検出されず、重傷を負う恐れがあります。 F3SJ-E/Bと危険部の間には、必ず安全距離を確保してください。機械 の危険部に到達する前に機械が止まらず、重傷を負う恐れがあります。 人体が検出エリアを通過してのみ機械の危険部に到達できるように機械周

▲ 警告
気的制御による急停止が不可能な機械には適用できません。たとえば、フ
回転クラッチを用いた機械プレスには使用しないでください。機械 危険部に到達する前に機械が止まらず、重傷を負う恐れがあります。 🛇
けについて
▲ 警告
3SJ-E/Bを設置後、機械が動作しない状態でF3SJ-E/Bが意図したと

ん。たとえば、フ	
機械 あります。 🛇	

)数字で入ります。

0 F3SJ-E/Bの設置は光沢面からの影響を受けないように設置して 0 複数セットのF3SJ-E/Bを使用するときは、しゃ光板を使用するなど 0

0

0

0

0





*Easyタイプには有りません



■インターロック マニュアルリセットにする配線 インターロック選択入力とリセット入力を以下のとおりに配線してください。

点滅 ミューティング/オーバーライド中





C(7) 2013年9月

Original instructions

Sti OMRON Model F3SJ-E F3SJ-B SAFETY LIGHT CURTAIN **INSTRUCTION SHEET** English Please read and understand this instruction sheet before storing, installing, programming, operating, maintaining, or disposing of the products. Please consult your OMRON representative if you have any questions or comments. Please refer to the User's Manual for detailed instructions on usage

© OMRON Corporation 2011-2014 All Rights Reserved.

Instructions in the official EU languages and a signed EC

Declaration of Conformity in English are available on our website at www.industrial.omron.eu/safety.

EC Declaration of Conformity

OMRON declares that F3SJ is in conformity with the requirements of the following EC Directives: Machinery Directive 2006/42/EC EMC Directive 2004/108/EC following EC

LEGISLATION AND STANDARDS

An F35J-E/B does not receive type approval provided by Article 44-2 of the Labour Safety and Health Law of Japan. Therefore, the F3SJ-E/B cannot be used as a "safety system for pressing or shearing machines" prescribed in Article 42 of that law.
 The F3SJ-E/B is electro-sensitive protective equipment (ESPE) in accordance with European Union (EU) Machinery Directive Index Annex V, Item 2.
 The F3SJ-E/B is in conformity with the following standards: (1) European standards

- a. Cortaince with European Conton (EO) Machinery Directive Index Annex V, Item 2.
 3. The F3SJ-E/B is in conformity with the following standards:

 EN 61496-1 (Type 4 ESPE), CLC/TS 61496-2 (Type 4 AOPD),
 EN 61496-1 (Type 4 ESPE), IEC 61496-2 (Type 4 AOPD),
 EN 61308-1 through -3 (SIL3), EN 61000-64,
 EN 61496-1 (Type 4 ESPE), IEC 61496-2 (Type 4 AOPD),
 IEC 61496-1 (Type 4 ESPE), IEC 61496-2 (Type 4 AOPD),
 IEC 61496-1 (Type 4 ESPE), IES 61496-2 (Type 4 AOPD),
 IEC 61508-1 through -3 (SIL3), ISO 13849-1:2006 (Category 4, PLe)
 (3) JIS standards
 IJS b 9704-1 (Type 4 ESPE), JIS B 9704-2 (Type 4 AOPD)
 (4) North American Standards:
 UL 61496-1 (Type 4 ESPE), JUL 61496-2 (Type 4 AOPD), UL 508,
 UL 61496-1 (Type 4 ESPE), UL 61496-2 (Type 4 AOPD), UL 508,
 UL 1998, CAN/CSA C22, No.14, CAN/CSA C22, No.08,
 The F3SJ-E/B received the approvals of EC Type-Examination in accordance with the EU Machinery Directive, Type 4 ESPE and Type 4 AOPD from the EU accredited body, TUV SUD Product Service GmbH.

 5. The F3SJ-E/B received the cartificates of UL listing for US and Canadian safety standards, Type 4 ESPE and Type 4 AOPD from the Third Party Assessment Body UL.
 6. The F3SJ-E/B is designed according to the standards listed below. To make sure that the final system complies with the following standards and regulations, you are asked to design and use it in accordance with all other related standards. Safety and Health Standards: OSHA 29 CFR 1910.212
 U.S. Occupational Stafety and Health Standards: OSHA 29 CFR 1910.212
 U.S. Occupational Standards: ANSI B11.1 to B11.19
 American National Standards: AN

Suitability for Use

Omron Companies shall not be responsible for conformity with any Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Bruyer shall be solely reproseible for determining appropriateness of the use. Buyer shall be solely responsible for determining appropriateness of the

use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases. NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PRECAUTIONS ON SAFETY

Regarding the alert symbols and meanings used for the safe uses In order to use the F3SJ-E/B safely, the precautions listed in this Instruction Sheet indicated by alert symbols and descriptions must be followed. Failure to follow all precautions and alerts may result in an unsafe use or operation. The following indications and symbols are used for the descriptions.





Alert Statements in this Manual For Users

The F3SJ-E/B must be installed, configured, and incorporated into a machine control system by a sufficiently trained and qualified person. An unqualified person may not be able to perform these operations properly, which may cause a person to go undetected, resulting in serious injury.
Thoroughly read this manual and understand the installation procedures operation check procedures, and maintenance procedures before using the product.

For Machines **MARNING** Do not use this sensor for machines that cannot be stopped by electrical control. For example, do not use it for a pressing machine that uses full-rotation clutch. Otherwise, the machine may not stop before a person \bigcirc reaches the hazardous part, resulting in serious injury

For Installation

Make sure to test the operation of the F3SJ-E/B after installation to verify that the		
F3SJ-E/B operates as intended. Make sure to stop the machine until the test is complete. Unintended function settings may cause a person to go		
undetected, resulting in serious injury.		
Make sure to install the F3SJ-E/B at the safe distance from the hazardous part of		
the equipment. Otherwise, the machine may not stop before a person		
reaches the hazardous part, resulting in serious injury.		
reached by a person that passes through the sensor's detection zone. Install the sensors so that part of the person is always present in the detection zone. Install the sensors so that part of the person is always present in the detection zone when working in a machine's hardrodus zones, eliminating areas where the sensors do not reach. If a person is able step into the hazardous zone, so figure the system with an interlock function that prevents the machine from being restarted. Failure to do so may result in serious injury.		
Install the interlock reset switch in a location that provides a clear view of the		
entire hazardous zone and where it cannot be activated from within the hazardous zone.		
The F3SI-E/B cannot protect a person from a projectile exiting the hazardous zone. Install protective cover(s) or fence(s).		
Install the F3SJ-E/B so that it is not affected by a reflective surface.		
Failure to do so may milder detection, resulting in serious injury.		
When using more than one set of F3SJ-E/Bs, install them so that mutual interference does not occur, such as by configuring series connections or		
using physical barriers between adjacent sets.		
Make sure that the F3SJ-E/B is securely mounted and its cables and		
connectors are properly secured.		
Do not use the sensor system with mirrors in a retro-reflective configuration as shown below. Doing so may hinder detection. It is possible to use mirrors to		
"bend" the detection zone to a 90-degree angle.		
Reflector Position with retro-reflection bent at 90°		
Perform an inspection for all F3SJ-E/B as described in "Chapter 5 Checklists"		
in the User's Manual. Install muting sensors so that they can distinguish between the object that is being allowed to be passed through the detection zone and a person. If the muting function is activated by the detection of a person, it may result in serious injury.		
Use independent two input devices for muting inputs.		
The muting and override functions disable the safety functions of the device. You must ensure safety using other method when these functions are operating A switch to activate the override function must be a hold-to-run device such as a spring return key switch and must be installed in a location that provides a clear view of the entire hazardous zone and where it cannot be activated from within the hazardous zone. Make sure that nobody is in the hazardous zone activating the override function.		

For Wiring
Connect the load between the output and 0V line (PNP output). Connecting the load between the output and +24 V line will result in a dangerous condition because operation is reversed to "ON when blocked".
Do not short-circuit the output line to the +24 V line. Otherwise, the output is always ON. Also, the 0 V of the power supply must be grounded so that output does not turn ON due to grounding of the output line.
Configure the system by using the optimal number of safety outputs that satisfy the requirements of the necessary safety category.
Do not connect each line of F3S1-E/B to a DC power supply of more than 24 VDC+20%. Also, do not connect to an AC power supply. Failure to do so may result in electric shock or breakdown of the device.
Make sure to perform wiring while the power supply is OFF.
Do not use the auxiliary output for safety applications. A person may go undetected even if F3SJ-B is out of order, resulting in serious injury.
For the F3SJ-E/B to comply with IEC61496-1 and UL508, the DC power supply unit must satisfy all of the following conditions: • Must be within the rated power voltage (24 V DC ± 20%) • Must have tolerance against the total rated current of devices if it is connected to multiple devices • Must comply with EMC directives (industrial environment) • Double or reinforced insulation must be applied between the primary and secondary circuits • Automatic recovery of overcurrent protection characteristics • Output holding time must be 20ms or longer • Must satisfy output characteristic reguirements for class 2 circuit or limited voltage current circuit defined by UL508 • Must stormply with laws and regulations, regarding EMC and electrical equipment safety, of the country or region where the F3SJ-E/B is used (Ex: In EU, the power supply must comply with the EMC Directive and the Low Voltage Directive.)
Double or reinforced insulation from hazardous voltage must be applied to

PRECAUTIONS FOR SAFE USE

PRECAUTIONS FOR SAFEE USE
Make sure to observe the following precautions that are necessary for ensuring safe use of the product.
anot install the F3SI-E/B in the following types of environments:
Areas exposed to intense interference light, such as direct sunlight
Areas event ere oil mist or corrosive gases are present
Areas event eoil unist or corrosive gases are present
Areas where the product may come into contact with water
Areas where the product may come into contact with water
Areas where the product gases are present
Areas where the product gase water present
Areas where the product may come into contact with water
Areas where the product gase water present
Areas where the product gase water present
Areas water the transposed to the following conditions:
Not used with a current that is higher than the rating:
Areas where the product in accordance with the relevant rules and regulations of the country or area where the product in gase.
Areas water to tighten the connectors of the cables securely.
Ake sure to tighten the connectors with ofter types of connectors, use connectors that provide a protection grade of IP54 or higher.
A state the input/output lines for the F351-E/B separate from high-potential power lines or through an exclusive conduit.
A term with the same or superior specifications.
A term a cable length with a cable other than the decidated cable, use cable.
A term a cable length with a cable other than the decidated cable, use cable.
A term a cable length with a cable other than the decidated cable, use cable.
A term a cable length with a cable other than the decidated cable, use cable.
A term a cable length with a c

PRECAUTIONS FOR CORRECT USE

- Observe the precautions described below to prevent operation failure, malfunctions, or undesirable effects on product performance.
 Storage conditions and installation environment
 Do not install, use, or store the F3SJ-E/B for a long time at a temperature or humidity out of the specified range.
 This is a class A product. In residential areas it may cause radio interference, in which case the Responsible Person may be required to take adequate measures to reduce interference.
 Do not use FaGJ-E/B at altitudes over 1,000 meters.
 Wiring and installation

- Wiring and installation
 - viring and installation Make sure to perform wiring while the power supply is OFF. Otherwise, the F3SJ-EJB may fail to operate due to the diagnosis function. Do not short-circuit output lines to +24 V line. Otherwise a fault of the EAST EJB wire supersonset.
 - Do not short-circuit output lines to +24 v line. Outerwise a faux of use F3SJ-E/B may occur.
 When extending the communication line with a cable (twisted-pair wire) other than the dedicated cable (F39-JD□□), use a cable with the same or superior specifications. Connect the shield to the 0V line.
 Be sure that there is nothing in the detection zone and the stable-state indicator is turned ON after power is turned ON.
 Properly perform the wiring after confirming the signal names of all the terminals.
- Do not operate the control system until 2 seconds or more after turning ON

- Do not operate the control system until 2 seconds or more after turning ON the power of the F3SJ-E/B.
 Be sure to route the F3SJ-E/B cable separate from high-potential power lines or through an exclusive conduit.
 When using a commercially available switching regulator power supply, make sure to ground the FG terminal (frame ground terminal).
 If the protective height is more than 1105mm, use Intermediate Brackets of specified quantities and locations according to the dimensions described in the User's Manual.
 Do not install the F3SI-E/B close to a device that generates high-frequency.
- Do not install the F3SJ-E/B close to a device that generates high-frequency noise. Otherwise, take sufficient blocking measures.

noise. Outerwise, take sufficient creating, because they affect the product's resin parts and paint on the extrusion.
Object detection
The F3SJ-E/B cannot detect transparent and/or translucent objects.

RATINGS

The model names of the F3SJ-E/B contain the 4 digits indicating the protective height (mm)

Model	Easy Type	Basic Type	
Item	F3SJ-E	F3SJ-B	
Detection capability	Opaque objects, 25 mm diameter		
Beam gap	20 mm		
Protective height (mm)	185 to 1,105 mm (8 to 54 beams) 185 to 2,065 mm (8 to 102 beams)		
Response time	ON to OFF: 15 ms max, OFF to ON: 70 ms max.		
Operating range (m)	0.2 to 7.0 m		
Startup waiting time	2 s max.		
Power supply voltage (Vs)	SELV/PELV 24 VDC±20% (ripple p-p 10% max.)		
Safety output (OSSD)	Two PNP transistor outputs, Load current: 200 mA max., Residual voltage: 2 V max. (except for voltage drop due to cable extension), Leakage current: 1 mA max., Load inductance: 2.2 H max. *1 Maximum capacitive load: 1 µF *2		
Auxiliary output	_	One PNP transistor output Load current: 100 mA max. Residual voltage: 2 V max.(except for voltage drop due to cable extension) Leakage current: 1 mA max.	
Input voltage	Both of test input and reset input: ON voltage: Vs-3V to Vs *3 (sink current 3mA max.) OFF voltage: OV to 1/2Vs, or open *3 External device monitoring input: ON voltage: Vs-3V to Vs *3 (sink current 5mA max.) OFF voltage: OV to 1/2Vs, or open *3	All of test input, interlock selection input, reset input, and muting input: ON voltage: Vs-3V to Vs *3 (sink current 3mA max.) OFF voltage: OV to 1/2Vs, or open *3 External device monitoring input: ON voltage: Vs-3V to Vs *3 (sink current 5mA max.) OFF voltage: OV to 1/2Vs, or open *3	

*1. The load inductance is the maximum value when the safety output frequently repeats ON and OFF. When you use the safety output at 4 Hz or less, the usable load inductance becomes larger.

*2. These values must be taken into consideration when connecting elements including a capacitive load such as capacitor

*3. The Vs in this case indicates a voltage value in usage environment

Internal Indicator Easy B Description linking Furns ON when incidence level is 170% or more of the output ON hreshold. ON Stable-state STB Blinks when the safety output is turned OFF due to disturbance light or vibration. 1 1 ⊖ Blinki ON/OFF ON Green: Output ON, Red: Output OFF ON/OFF output-s indicato 14. Top-beam-state indicator (Blue 4. Top-beam-state indicator (Blue Blinking Output related error ON During lockout Lockout indicator LOCKOUT . Stable-state indicator (Green) 1. Stable-state indicator (Green Blinking During lockout, error occurrence side 2. ON/OFF-state indicator (Green/Red) 2. ON/OFF-state indicator (Green/Red 01007 ON When power is ON Power indicator POWER 3. Lockout indicator (Red) 3. Lockout indicator (Red) Blinking Error due to power supply voltage/nois 4. Power indicator (Green) 9. Communication indicator (Green) Test indicato TEST Blinking During emission stoppage 5. Test indicator (Green Muting error indicator Muting input 10. Configuration indicator (Green) MUTIN ERROR O Blinking Muting error 6. Muting error indicator (Green) 11. Internal error indicator (Red) MUTE1 ON Muting input 1 is ON 12. Interlock indicator (Yellow) 7. Muting input 1 indicator (Green indicator Muting input 2 External device monitoring indicator (Green) ON Muting input 2 is ON MUTE2 8. Muting input 2 indicator (Green indicator When communication between emitter and receiver is established. ON Communindicator сом 15. Bottom-beam-state indicator (Blue 5. Bottom-beam-state indicator (Blue) O Blinking Communication error 10 Configura indicator O Blinking Model configuration of the or sensor is in error CFG INTERNAL O Blinking Internal error indicator ON During interlock 12 Interlock indicator INTERLOCK Blinking Input wiring error External dev ON External device monitoring input is ON monitoring indicator EDM Blinking External device monitoring e ON Top beam is receiving light ТОР 4 Top-beam-state indicator Blinking During muting/override Cap disconnection error 15 Bottom-beam-state indicator Bottom beam is receiving light ON BTM - O Blinking During muting/override

Input/Output Circuit

Wiring for auto reset mode and external device monitoring function

Wiring to disable external device monitoring function



* Not available for Easy type

Short-circuit the external device monitoring input to the auxiliary output.



Wiring for interlock and manual reset mode Perform wiring for interlock select input and reset input as follows.



OMRON Corporation Industrial Automation Company Tokyo, JAPAN Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V. Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON SCIENTIFIC TECHNOLOGIES INC. Dumbarton Circle, ont, CA 94555-3605 U.S.A. Tel: (1) 510-608-3400/Fax: (1) 510-744-1442

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark,

Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD.
Composite Rank of China Tow Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

E() Sep, 2013