OMRON

Model K8AB-VS

Measuring & Monitoring Relay

English Instructions Manual

Thank you for purchasing an OMRON pridyct. In this Instructions Manual, you will find information about this product's features, capabilities, and operating instructions. Please observe the following when using this product.

- This product is designed for use by qualified electrical engi
- · Read and understand this Instructions Manual thoroughly, and make proper use of this product.
- Keep this Instructions Manual for future reference

OMRON Corporation

9419059-7 E

Precautions for Safe Use

Make sure to follow the instructions below to ensure safety.

- 1. Do not use or keep this product in the following environments
- · Outdoors, or places subject to direct sunlight or wearing weather.
- · Places where dust, iron powder, or corrosive gases(in particular, sulfuric or ammonia gas) exist.
- · Places subject to static electricity or inductive noise · Places where water or oil come in contact with the
- Make sure to install this product in the correct direction.
 There is a remote risk of electric shock. Do not touch terminals while electricity is being supplied
- Make sure to thoroughly understand all instructions in the Instructions Manual before handling this product.
- 5. Make sure to confirm terminal makings and polarity for correct wiring. 6. Ensure that terminal screws have been tightened firmly.
- Recommended torque: 0.49 N m Assured torque: 0.59 N m 7. Operating ambient temperature and humidity for this
- product must be within the indicated rating when using 8. There is a remote risk of explosion. Do not use this
- product where flammable or explosive gas exists.
- 9. Make sure that no weight rests on the product after
- 10. To enable an operator to turn off this product easily, install switches or circuit breakers that conform to relevant requirements of IEC60947-1 and IEC60947-3, and label them appropriately.
- 11. Do not turn a setting volume beyond the scope of

Precautions for Correct Use

- For Proper Use

 (1) Do not use the product in the following locations.

 Places subject to radiant heat from heat generating devices.

 Places subject to vibrations or physical shocks.

 (2) Make sure to use setting values appropriate for the controlled object. Failure to do so can cause unintended operation, and may result in accident or corruption of the product. corruption of the product.

 (3) Do not use thinner or similar solvent for cleaning. Use commercial alcohol.
- When discarding, properly dispose of the product as industrial waste.
- (5) Only use this product within a board whose structure
- allows no possibility for fire to escape.

 (6) This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce

About Installation

- About Installation
 (1) When wiring, use only recommended crimp terminals.
 (2) Do not block areas around the product for proper dissipation of heat. (If you do not secure space for heat dissipation, life cycle of the product will be compromised.)
 (3) To avoid electrical shocks, make sure that power is not supplied to the product while wiring.
 (4) To avoid electrical shocks, make sure that power is not supplied to the product when performing DIP switch settings.
 Noise Conutermeasures
 (1) Do not install the product near devices generating strong high frequency waves or surges.

- strong high frequency waves or surges.

 (2) When using a noise filter, check the voltage and current and install it as close to the product as possible.

 (3) In order to prevent inductive noise, wire the lines connected to the product separately from power lines carrying high voltages or currents. Do not wire in parallel with or on the same cable as power lines Other measures for reducing noise include running lines along separate ducts and using shield lines.

- lines along separate ducts and using shield lines.

 To avoid faulty operations, malfunctions, or failure, observe the following operating instructions.

 (1) When turning on the power, make sure to realize rated voltage within 1 second from the time of first supply of electricity.

 (2) Make sure to use power supply for operations, inputs, and transformer with the appropriate capacity and rated burden.

 (3) Maintenance and handling of this product may only be performed by qualified personnel.

 (4) Do not use this product with circuits that have distorted input wave forms. Distortion in wave forms will result in errors.

 (5) Using this product for thyrister controls or inverters wil result in errors.

Applicable Standards ______

Installation environment	Installation Category Ⅲ, Ponllution Degree 2			
Application Standard	EN60255-5/-6			
Safety Standard	EN60664-1			
	(EMI) EN61326+A1 Industrial applications			
	Terminal interference wave voltage CISPR11 Group1, ClassA : CISPR16-1/-2 Electromagnetic interference wave CISPR11 Group1, ClassA : CISPR16-1/-2			
	(EMS) EN61326+A1 Industrial applications			
	Electrostatic discharge	EN61000-4-2 : 4kV(Contact) 8kV(In air)		
EMC	Radiating radio- frequency electr -omagnetic field	EN61000-4-3 : 10V/m 1kHz Sine Wave Amplitude Modulation (80MHz to 1GHz)		
	Burst	EN61000-4-4 : 2kV(Power Line) 1kV(I/O Signal line)		
	Surge	EN61000-4-5 : 1kV with line (Power Line) 2kV with ground (Power Line)		
	Conducted RF	EN61000-4-6 : 3V(0.15 to 80MHz)		
	Power frequency magnetic field immunity	EN61000-4-8 : 30A/m		
	Voltage dip/Short interruptions	EN61000-4-11 : 0.5 Cycle, 0.180* each polarity 100% (Rated Voltage)		

Overview

This product is an electric controller for outputting an alarm upon detection of voltage. [1-phase Over or Under voltage Relay]

■ Specifications ■

Rating

Power Supply Voltage		AC/DC24V,AC100/115V, AC200/230V		
Permissible Voltage Variability Range	85 to 110% of rated power-supply voltage			
Power Consumption	AC/DC24V : 5VA/1W maximum AC100/115V : 4VA maximum AC200/230V : 5VA maximum			
Dielectric Resistance	20MΩ minimum (at 500V) Between electric circuit and case			
Dielectric Withstanding Voltage	2000V for 1 minute Between electric circuit and case			
Noise Immunity	\pm 1,500V on power-supply terminals in normal or common mode(Square wave with 1 ns at rearing Pulse duration 1 μ s/100ns)			
Vibration Resistance	Vibrations : 10 to 55Hz, Acceleration : 50m/s ² , X,Y,Z Directions : 5 min × 10 scanning			
Shock Resistance	150m/s ² (however, 100m/s ² at relay contact point) 3 times each in 3 axis and 6 directions			
	-VS1	AC/DC 6-60/10-100/30-300m\		
Input Range	-VS2	AC/DC 1-10/3-30/15-150V		
	-VS3	AC/DC 20-200/30-300/60-600\		
	-VS1	9kΩ minimum		
Input Impedance	-VS2	100kΩ minimum		
	-VS3	1MΩ minimum		
Overload Capacity	115% of maximum input within range (continuous)/125%, 10s			


Output Rating

Rated Load	Resistance Load : AC250V 6A, DC30V 6A
Maximum Contact Point Voltage	AC250V, DC30V
Maximum Contact Point Current	AC6A, DC6A
Maximum Opening and Closing Capacity	1500VA, 180W
Minimum Applicable Load (P Level)	DC5V, 10mA *Reference value
Mechanical Life	10 million times minimum
Electrical Life (Ambient temperature condition: +20°C)	Make 50 thousand time, Break 30 thousand times
	Maximum Contact Point Voltage Maximum Contact Point Current Maximum Opening and Closing Capacity Minimum Applicable Load (P Level) Mechanical Life Electrical Life (Ambient temperature


Installation

Diagram of Outside Dimensions

Unit: mm

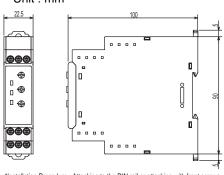

 
Installation Procedure: Attaching to the DIN rail or attaching with front screws Measurements for attachment with front screws



When attaching wih front screws, draw out hooks on the bottom of the product to the left and right sides.


●Installation Procedure

Pull down the hook, and then fasten the upper tab onto the rail, fitting in the unit until the hook locks into place.

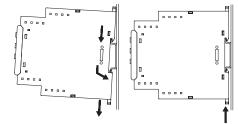

Uninstallation Procedure

  Using a flathead screwdriver or a similar tool. pull out the hook downward and lift the unit from the bottom.



Fixing Bracket


Attach the type K8AB to the DIN rail.

 DIN Rail Type PFP-100N (1,000mm) Type PFP-50N (500mm)


Recommended Crimp Terminal

Recommended Crimp Terminal	Recommended Cable Diameter
AI 1,5-8BK (Phoenix Contact product)	AWG#16
AI 1-8RD (Phoenix Contact product)	AWG#18
AI 0,75-8GY (Phoenix Contact product)	AWG#18


■ List of DIP Switch settings _____

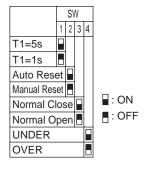

Time Chart

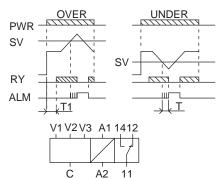


■ Terminal Connections ■

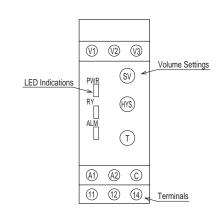

Terminal Name	Description	
V1, V2, V3	Voltage input terminals	
С	Common for voltage input terminals	
A1, A2	Operative power supply	
11	Common for contact point output	
12	b-contact output	
14	a-contact output	
SV	Operate value setting (10 to 100%)	
HYS.	Hysteresis setting (5 to 50%)	
Т	Operate time setting (0.1 to 30s)	
PWR	Power indication	
RY	Relay output status Light-on 11-14 conduction	
ALM	Alarm operation status Light-on = Alarm output status	
	V1, V2, V3 C A1, A2 11 12 14 SV HYS. T PWR RY	

Wiring Diagram

1-phase

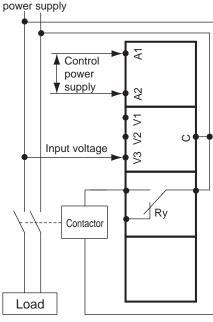

Connect the input between terminals V1-COM, V2-COM, V3-COM depending on the input voltage

Suitability for use

OMRON shall not be responsible conformity with any star -dards, codes, or regulations that apply to the combination of the products in the customer's application or use of the

Take all necessary steps to determine the suitability of the

product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPER LY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM. See also Product catalog for Warranty and Limitation of

Contact Information

OMRON ELECTRONICS LLC.
One Commerce Drive Schaumburg, IL 60173-5302 U.S.A.
Prome: 1-84-81-7900 Fax: 1-847-843-7787
OMRON CANADA INC.
885 Milner Avenue Scarborough, Ontario M1B 5V8, CANADA
Phone: 1-416-286-6465 Fax: 1-416-286-6648
OMRON EUROPE BV.
Wegalaan 67-69, 2132 JD Hoofddorp The Netherlands
Phone: 31-23-56-81-300 Fax: 31-23-56-81-388
OMRON ELECTRONICS PTYLTD.
71 Epping Road, North Ryde, Sydney, N.S.W 2113, Australia 71 Epping Road, North Ryde, Sydney, N.S.W 2113, Australia Phone: 61-2-9878-6377 Fax: 61-2-9878-6377 Fax: 61-2-9878-6378 OMRON ASIA-PACIFIC PTE. LTD.
No. 438A Alexandra Road #05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Phone: 65-6835-3011 Fax: 65-6835-2711 OMRON CORPORATION.
Shiokoji Horikawa, Shirnogyo-ku, KYOTO, 600-8530 Japan Phone: 81-75-344-7109 Fax: 81-75-344-7149