

- 1. この製品を分解したり、改造をしないでください。
- 2. この製品を引火性・爆発性ガスの環境で使用しないでください。

使用上の注意

以下に示す項目の内容に従い、正しくお使いください。場合によっては破損や故障の原因 になります。

- 1. 製品の構成について
- ·この製品(形ZX-TDS)は、専用のアンプユニット部(形ZX-TDADD)と接
- 続してご使用ください。下記の形式のアンプユニット部とは接続できません。
- 形 Z X ー L 口 ロシリーズ スマートセンサ (レーザタイプ) 形ZX-Eロロシリーズ スマートセンサ(リニア近接タイプ)
- 2、センサ部の取扱いについて
- この製品は精密機器ですので、落下させるなどの衝撃を加えないでください。 破損する恐れがあります。
- この製品のプランジャには、■測定方法<正しく測定いただくために> に記載した 規定以上の力を加えないでください。破損する恐れがあります。 プランジャの押込み過ぎは、破損の原因となります。アンプユニット部(ZX-TD A口口)の警告(OVER)が表示されない範囲でお使いください。
- ゴムブーツを取りはずすと亀裂、キズが発生し、防水性、防塵性が損なわれます。こ の場合、保護構造の保証は致しかねます。
- センサヘッドとプリアンプ間のコードの切断や延長はしないでください。 特性が変化します。
- 3 設置場所について
- (1) この製品は、つぎのような場所で使用しないでください。
 - ・直射日光があたる場所。
 - 湿度が高く結露する恐れがある場所
- ・腐食性ガスのある場所
- ・腐埃のある場所
- 油や薬品などの飛沫のある場所。
- 本体に直接、振動や衝撃が伝わる場所
- ・静電気や過大なノイズを受ける場所
- ・強磁界、強電界がある場所
- (2) センサヘッドの保護構造(IP67)は水密性(完全防水)とは異なります。 常時水没しての使用はしないでください。
- (3) プリアンプは防水構造ではありません。水滴や油、粉塵のかかる場所では 使用しないでください。
- (4)プリアンプは温度特性をもってます。アンプユニット部や電源など発熱する機器 に密着させて設置しないでください。
- (5) センサに強磁界を与えると出力が変化します。 強磁体への取りつけや、モータなど強磁界を発生する機器の近くでのご使用は 避けてください。
- 4. 取りつけ・取りはずしについて 電源を入れた状態での取りつけおよび、取りはずしをしないでください。

故障の原因となります。

5. 配線について

・センサ部とアンプユニット部間のコードの延長は全長で10m以下としてください。 またセンサ部からのコードの延長には、別売の両端コネクタコード(形ZX-XC口 A)をご使用ください。

 動力線などノイズの重畳が予想される線とは距離をあけて配線してください。 ・接続後、必ず、通電前に再度、配線をご確認ください。

6、ウォームアップについて(電源投入後安定待ち時間)

・電源投入後、下記のウォームアップ時間を経過してからご使用ください。 1 µmオーダの測定用途 :5分

- 0.1µmオーダの測定用途:15分
- 電源投入直後は、センサ部の特性が変動する場合があります。

 アナログ出力をご使用される場合のウォームアップ時間はアンプユニット部の 取扱説明書をご参照ください。

- 7. 清掃について
- 有機溶剤は、製品表面を溶かしますので、避けてください。 ・清掃は柔らかい乾いた布で行ってください。



<u> </u>			
	形式	形ZX-TDS01	Γ
項目		形ZX-TDS01T	
適合アンプユニット部			
<u>測定範囲</u>		1mm	
可動範囲		約1.5mm	
<u> 分解能 (注1)</u>	(注2)		_
<u> 直線性 (注2)</u>		0.1%F.S. /	形Z
繰返し性(注2)、	(注4)	0.5µm	
測定力 (注5)		約0). 7
保護構造	センサヘット・	۱۴ <u>ا</u>	°67
(IEC60529規格) _	フ・リアンプ		
機械的寿命			
使用周囲温度		動作時:0	1~
		(ただ)	به میا
使用周囲湿度			
		(<i>t</i> = <i>t</i> =	1
温度特性(注6)	センサヘット	0.03%F.S/°C	
	フ゜リアンフ゜		
材質	センサヘット・		_
	コ・ムフ・ーツ	フッ素	€⊐1
	プリアンプ		¥.
	取りつけ金具		
督量		約100g	ľ

注1.アンプユニット部(形ZX-TDA口口)接続時の読み取り可能最小値です。

(平均化回数:256回)

注2. Ta=20℃での値です。 注3.F.S.とは測定範囲です。

1mm : 形ZX-TDS01	(0.1%F.S.)、形ZX-TDSC
4mm:形ZX-TDS04	(0.1%F.S.)、形ZX-TDSC
4mm:形ZX-TDS04T	(0.5%F.S.)、形ZX-TDSC





(0.5%F.S.) 0 1 T 04 - L (0.1%F, S,) 04T - L (0.5%F.S.)





・取りつけ金具 (91) 75 29 (16.4) E, 4.8 4.8 7. 8 0 Ю łĦ 取りつけ穴の加工寸法 27+0 1 7 — N2 ■取りつけ、取りはずし 1. センサヘッド ・センサヘッドをねじの先端で直接締付けないでください。 センサヘッドが破損する恐れがあります。 ・<推奨取りつけ治具>に示すような治具を用いて、M3ネジにより、 締付けトルク 0. 6~0. 8N・mの範囲で取りつけてください。 ・センサヘッドはく推奨の取りつけ位置>Aの範囲で固定してください。 治具を製作される場合は、<3点支持での取りつけ例>に示す通り、 支持部の締付け力が100N以下となるよう、設計願います。 固定後プランジャの動きをご確認ください。 強く固定(径方向に圧縮)するとプランジャの動きが悪くなります。、 温度変化の大きな環境でご使用の場合は、
 イ推奨の取りつけ位置>B部 (φ6部の潮定子側)での固定を推奨します。 温度変化による膨張、収縮の影響が小さくなります。 <推奨の取りつけ位置> Ł く推奨取りつけ治具> 1,50 08 HT

2-Ø3.50

材質:アルミ



くゆ8スタンド用取りつけ治具>

- プリアンプ
 プリアンプは付属の専用取りつけ金具で固定して お使いください。
- 取りつけ金具をM3ねじで固定します。
 取りつけ穴の加工寸法は 外形寸法図をご参照ください。

プリアンプをDINレールに設置する場合は、 別売のDIN取りつけ用金具 (形ZX-XBT2) をご使用ください。

② プリアンプの片方を取りつけ金具にはめます。

③ 次にプリアンプのもう片方を取りつけ金具にはめます。 このときプリアンプの両端が取りつけ金具のストッパの位置まで確実に押し込まれていることをご確認ください。

プリアンプを取りつけ金具から取りはずす場合は、 プリアンプの中心を持って、 上方向に引き抜いてください。



■保守

- ・ 測定子のねじがゆるむ場合があります。始業時等に測定子のねじのゆるみが無いか ご確認ください。
- ・ 測定子の汚れは誤差の原因となります。定期的にクリーニングを行ってください。
- クリーニングの方法はエタノールをしみ込ませて綿棒等で、先端部を洗浄した後、
 レンズクリーナ等で軽く拭き取ってください。

ご使用に際してのご承諾事項

①安全を確保する目的で直接的または間接的に人体を検出する用途に、本製品を使用 しないでください。同用途には、当社センサカタログに掲載している安全センサをご使用く ださい。

②下記用途に使用される場合、当社営業担当者までご相談のうえ仕様書などによりご 確認いただくとともに、定格・性能に対し余裕を持った使い方や、万一故障があっても危 険を最小にする安全回路などの安全対策

a)屋外の用途、潜在的な化学的汚染あるいは電気的妨害を被る用途またはカタロ グ、取扱説明書等に記載のない条件や環境での使用

b)原子力制御設備、焼却設備、鉄道·航空·車両設備、医用機械、娯楽機械、安

全装置、および行政機関や個別業界の規制に従う設備 c)人命や財産に危険が及びうるシステム・機械・装置

のパネトが上にたったりない。 の)ガス、水道、電気の供給システムや24時間連続運転システムなどの高い信頼性 が必要な設備

e)その他、上記 a) ~ d) に準ずる、高度な安全性が必要とされる用途

*上記は適合用途の条件の一部です。当社のベスト、総合カタログ・データシート等最新版の カタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。

	ロン株式会初 温川区大崎1-11-1	社 営業統轄事業 ゲートシティ大崎ウエストタワー14		1032)
		技術的なお問い合せの方も、フ		
1		hますので、案内に従って操作		
		19-066 (フリーコーノ	-	
		HSなどは055-982-5015で	••	-
		ルング機器の技術窓口は055	-982-5002 73	Fo
	術のお問い合わせ			+
		2:00/13:00~19:00(土・日	・祝宗日は17:00	a (')
	営 業 日 :年末年始(業のお問い合わせ			
		.⊪∉⊫]] 2:00∕13:00~17:30		
		器日/春期·夏期·年末年始(木暇を除く	
ØF	AXによるお問い合	わせは		
_	お客様相談室	FAX055-982-5051		
•	の他のお問い合せ	 ±先		
_		・サンプル・承認図は貴社のお	取引先、または	費社担当

OMRON

No. 0686690-0A

MODEL ZX - TDS(For Model ZX-TDADD)

Smart Sensor (High accuracy Contact-type) sensor unit

INSTRUCTION SHEFT

Thank you for purchasing ZX-TD series (High accuracy Contact-type). Read carefully this instruction sheet before use and keep this by your side

Export trade control Law

ZX-TD series is applicable for Export permit object by the Foreign exchange or the Foreign export contro! law. When you carry this product out of Japan, please make an application to Japanese government.

There are the models that are not applicable for export trade control law. The non-applicable models are as listed below. ZX-TDS01, ZX-TDS04, ZX-TDS04-L

The linearity for the above listed models is different from standard model ZX.

ZX-TDS□T-□ is not applicablie for export trade control.

OMRON Corporation

©All Rights Reserved.

CAUTION

O Please observe the notice saying here about safety. O The indication and the meaning are as below.

Point on safety	Necessary notice to save safety.
Caution on use	Notice to put out the function and performance.

Marks

○ This mark indicates the prohibition. The concrete notice are indicated by sentence or picture. The left mark means to prohibit dismantling the switch.

Point on safety

- 1. Do not dismantle or rework the product.
- 2. Do not use the switch where ignitable gas or explosive gas exists.



Caution on use

Use properly according to the following contents. Otherwise, break or fail may be occurred

1. Structure of the product

• Use this product(ZX-TDS) by connecting with an exclusive amplifier unit ZX-TDADD. Note that the following amplifier units cannot be connected with this product ZX-L series smart sensor (laser type)

ZX-EDD series smart sensor (linear proximity type)

2. Handle of sensor part

• Do not apply any shock to the product or do not fall because this is precise product.

• Do not apply an excessive force that is noticed on the "Measuring method" to the plunger. Otherwise, it may be broken.

• Do not push the plunger excessively to avoid the broken. Use the product while the alarm indicator (OVER) of the amplifier unit ZX-TDADD is not lit.

- · Do not remove the rubber boot to avoid the crack, scratch, and deterioration of waterproof or dust proof. In this case, we cannot guarantee this product.
- Do not shorten or extend the code between the sensor head and the pre-amplifier to avoid the change of the characteristics.
- 3 Environment
 - (1) Do not use products under the following condition.
 - · Direct rays of the sun is applied.
 - · Humidity or condensing.
 - · Corrosive gasses exists.
 - Dust exists
 - It is subject to oil or chemical spattering.
 - Vibration or shock is applied to the product directly.
 - Static electricity or excessive noise is subjected.
 - Heavy magnetic field or electric field.
 - (2) The protective construction (IP67) of the sensor head is different from watertight. Do not use the products in water.
 - (3) Pre-amplifier does not provide waterproof structure. Do not use it in drip, oil or dust spattering.
 - (4) Pre-amplifier has temperature characteristics. Do not mount the product near the equipment, which generates heat such as the amplifier unit or power supply.
 - (5) The output changes when give the sensor heavy magnetic field. Do not mount the product to the ferromagnetic material and avoid using near the equipment which generates heavy magnetic like motors.
- 4. Mounting and dismounting

• Do not apply power when mounting or dismounting the product to avoid the failure.

5 Wiring

• Extension of the code between the sensor head and the pre-amplifier is less than 10 m in the total length. When extend the code from the sensor part, use with the end connector code ($ZX-XC\Box A$ - order separately). • Distance the product from the line which is generating the overlapped noise such as power line.

- · Confirm the wiring before input the electric power.
- 6. Warm-up (Time to stabilize the characteristics of this product after power on)
 - •Warm-up time is as below
 - In case of measurement for 1μ m order: 5 minutes.
 - In case of measurement for 1 μ m order: 15 minutes.
 - Just after power is ON, the characteristics of the sensor part may fluctuate.

• When use the analog output, the warm-up time is mentioned on the instruction sheet of the amplifier unit.

- 7 Cleaning
 - Do not use organic solvent to avoid melting the product surface. ·Wipe the surface of the product with a soft dry cloth.

■Specification / Performance

ltem	Part No.	ZX-TDS01 ZX-TDS01T
Applicable Amplifier	unit	
Measurement range		1 mm
Max. Actuator travel	distance	Approx. 1.5mm
Resolution (Note.	1, 2)	
Linearity (Note. 2)	0. 1% F.S.
Repeat accuracy (No	te 2.4)	0.5µm
Measurement force	(Note 5)	
Enclosure rating	Sensor head	
(IEC60529)	Pre-amplifier	
Mechanical life		
Ambient temperature		Operat
		()
Ambient humidity		(
-		C
Temperature (Note 6	Sensor head	0.03%F.S/°C
characteristics	Pre-amplifier	
Material	Sensor head	
1	Rubber boot	F
	Pre-amplifier	
	Mounting bracket	
Weight		Approx. 100

1) Minimum readable value when connect the amplifier unit(ZX-TDA

times)

2) Ta = 20C

3) F.S. means the measurement range.

1mm : ZX-TDS01	(0.1%F.S.)、	ZX-TDS01T
4 m m : Z X – T D S O 4	(0.1%F.S.)	ZX-TDS04-
4mm : ZX - T D S 0 4 T	(0.5%F.S.),	ZX-TDS04T



Attach or detach method of the connector

Meet the both marks on the connectors, then push the connectors until connectors are locked.



Hold the outer connector ring of the sensor unit and the connector of the amplifier unit, pull straight by sliding the outer connector ring in the tension direction.

Connector outer ring	
Tension direction	

Do not power ON during the connection to avoid electric shock or product broken.

	ZX-TDS04	ZX-TDS04-L
	ZX-TDS04T	ZX-TDS04T-L
	ZX-TDA11	
	4mn	n
m	Approx	k. 5mm
_	0.1 µm	
/ IN ca	<u>se of ZX-TDSDT-D 0. 5% F.</u>	S. (Note 3)
	<u>1 µ</u>	m
Approx	0.7N	Approx 0.25 N
<u> </u>	37	IP54
	1P40	
10, 0	00,000 operations	
ting:	0-50C, Storage: -15-	-60C
Nith n	o icing or condensin	g)
Dperat	ing, Storage: 30-85%	
Vith n	<u>o icing or condensin</u>	g))
:	0. 01%F.	s. ∕°C
	<u>0.01%F.S./°C</u>	-
	Stainless steel	
luori	ne rubber	Silicon rubber
	<u>Polycarbonate resin</u>	
	Stainless steel	
g	Approx. 1	00 g
00).	4) According to Japanese	standard JIS B7536.

- 5) Typical value at the center of the movable range.
- 6) Typical value at the center of the measuring range.
- (0.5%F.S.) -L (0.1%F.S.) -L (0.5%F.S.)

- · Contact the measuring tip to the measuring surface vertically.
- Remove dust on the measuring surface.
- Start measuring after confirmation of stopping of the measurement. object and response time of sensor (300ms) past.
- Fix the code firmly to avoid the stress to the code and fluctuation of the measurement value .
- Do not apply an excess force as noted below to the plunger to avoid the damage of the plunger.



Dimensions



Pre-amplifier (when mount with mounting braket)









■Mounting and dismounting

1. Sensor head

• Do not tighten the sensor unit with a screw directly to avoid the break of the sensor.

• Nounting the sensor unit with a jig indicated on "Recommended mounting jig" with a tightening torque from 0.6 to0.8N • m with M3 screws.

• Fix the sensor head within the range of "A" as noted below.

 In case of using mounting jig, design it to set the tightening force 100N max. as noted on the "Example of the mounting support with 3-point".

Confirm the moving for the plunger of the sensor unit after fix it.
 Do not fix the sensor unit with an excess force in the direction of the center of sensor to keep the movement of plunger smooth.

 In case of using the product in the environment where the temperature changes widely, fix the sensor unit in the range of "B" as noted below. (In the range of the 6mm diameter of the sensor unit)

<Recommended mounted position>



<Recommended mounting jig>







- Pre-amplifier
 Use the pre-amplifier by fixing with the attached mounting bracket.
- ① Mounting the mounting bracket with M3-screws. About the processing size of the mounting hole, see the outline drawing. When install the pre-amplifier on a DIN rail, use a bracket (ZX-XBT2 - order separately).

[Fix of mounting bracket]



 Install the other side in the mounting bracket. Then, confirm the ends of pre-amplifier fits firmly to the stopper of the mounting bracket.
 When dismounting it from the mounting bracket, pull out to the upper direction by holding the center of pre-amplifier.



Maintenance

- Confirm if sensor unit is loosen before use.
- Clean the sensor unit periodically to avoid the error.
- Wipe the dust on sensor tip with cotton with a lines-cleaner.

Suitability for Use

THE PRODUCTS CONTAINED IN THIS SHEET ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES.

Please refer to separate catalogs for OMRON's safety rated products. OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the products in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used. Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

See also Product catalog for Warranty and Limitation of Liability.

EUROPE	
OMRON EUROPE	B.V. Sensor Business Unit
Carl-Benz Str.4, D-7	71154 Nufringen Germany
Phone:49-7032-811	-0 Fax: 49-7032-811-199
NORTH AMERICA	L .
OMRON ELECTRO	DNICS LLC
One Commerce Driv	ve Schaumburg, IL 60173-5302 U.S.A
Phone:1-847-843-79	900 Telephone Consultation
1-800-55-OMRON	Fax : 1-847-843-7787
ASIA-PACIFIC	
OMRON ASIA PAC	TFIC PTE LTD
83 Clemenceau Aver	nue,#11-01 UE Square,Singapore 239920
Phone : 65-6-835-30)11 /Fax :65-6-835-2711
MRON Corporati	ion

(n)