

E5EN

OMRON

Temperature controller

EN INSTRUCTION MANUAL

Thank you for purchasing the OMRON E5EN Digital Temperature Controller. This manual describes the functions, performance, and application methods needed for optimum use of the product.

- Please observe the following items when using the product.
- This product is designed for use by qualified personnel with a knowledge of electrical systems.
 - Before using the product, thoroughly read and understand this manual to ensure correct use.
 - Keep this manual in a safe location so that it is available for reference whenever required.

OMRON Corporation

©All Rights Reserved

For detailed operating instructions, please refer to the E5CN/AN/EN User's Manual (Cat. No.H134).

Significance of WARNINGS and CAUTIONS


Safety Precautions

- CAUTION**
- Indicates a potentially hazardous situation which, if not avoided, is likely to result in minor or moderate injury or property damage. Read this manual carefully before using the product.

1618532-3B


Wiring

Dimensions

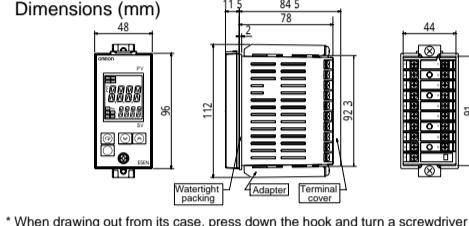

- When drawing out from its case, press down the hook and turn a screwdriver to loosen the screw on the lower part of the front panel.
- A Setup Tool port is provided on the bottom of the product. Use this port to connect a personal computer to the product when using the Setup Tool. E58-CIFQ1 USB-Serial Conversion Cable is required to connect the personal computer to the product. (Do not use the product with the USB-Serial Conversion Cable left permanently connected.)
- Refer to the instruction manual provided with the USB-Serial Conversion Cable for details on connection methods.

Names of parts on front panel

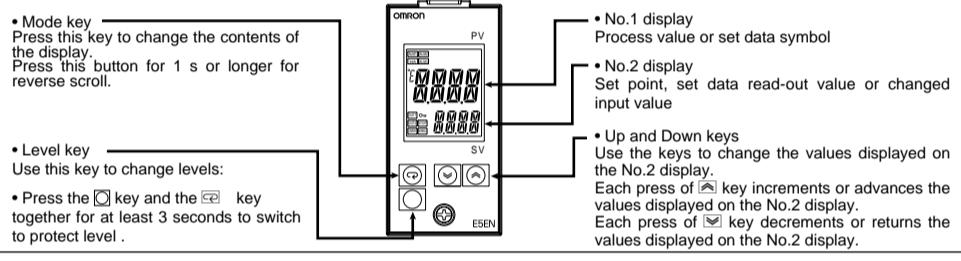

- Operation indicators**
- No.1 display: Process value or set data symbol
 - No.2 display: Set point, set data read-out value or changed input value
 - Up and Down keys: Use the keys to change the values displayed on the No.2 display. Each press of **Up** key increments or advances the values displayed on the No.2 display. Each press of **Down** key decrements or returns the values displayed on the No.2 display.
 - OUT1: Control output 1 indicator Lit when control output 1 is ON and not lit when it's OFF.
 - OUT2: Control output 2 indicator Lit when control output 2 is ON and not lit when it's OFF.
 - STOP: control stop indicator Lit when event input or "Run/Stop" is stopped during operation. During control stop, functions other than control output are valid.
 - CMW: communications writing enable/disable indicator Lit when communications writing is "enabled" and is out when it is "disabled".
 - HA: Heater burnout alarm/HS alarm indicator Lit when a heater burnout or HS alarm has occurred.
 - ALM1: Alarm 1 indicator Lit when alarm 1 is ON.
 - ALM2: Alarm 2 indicator Lit when alarm 2 is ON.
 - ALM3: Alarm 3 indicator Lit when alarm 3 is ON.
 - • •

- **°C / °F**: temperature unit The temperature unit is displayed when the displayed value is a temperature. When this parameter is set to "°C", "°C" is displayed, and when set to "°F", "°F" is displayed. This flashes while ST(Self-Tuning) is activated.
- **O-T**: Protection indicator Lit when Setting Change Protect is ON (disables the Up and Down Keys).
- **MANU**: Manual output indicator Lit when the Auto/Manual Mode is set to Manual Mode.

Operation menu

Input type

	Input type	Input	Setting	Setting range
Platinum resistance thermometer	Pt100	0	-200 to 850 ()	/ -300 to 1500 (°F)
	1	-199.9 to 500 ()	/ -199.9 to 900.0 (°F)	
	2	0.0 to 100.0 ()	/ 0.0 to 210.0 (°F)	
	3	-199.9 to 500.0 ()	/ -199.9 to 900.0 (°F)	
Thermocouple	J	4	0.0 to 100.0 ()	/ 0.0 to 210.0 (°F)
	K	5	-200 to 1300 ()	/ -300 to 2300 (°F)
	L	6	-200 to 500.0 ()	/ 0.0 to 900.0 (°F)
	T	7	-100 to 850 ()	/ -100 to 1500 (°F)
	E	8	-200 to 400.0 ()	/ 0.0 to 750.0 (°F)
	R	9	-200 to 400 ()	/ -300 to 700 (°F)
	N	10	-199.9 to 400.0 ()	/ -199.9 to 700.0 (°F)
	S	11	0 to 600 ()	/ 0 to 1100 (°F)
	B	12	-100 to 850 ()	/ -100 to 1500 (°F)
	U	13	-200 to 400 ()	/ -300 to 700 (°F)
Infrared Thermosensor ES1B	Y	14	-199.9 to 400.0 ()	/ -199.9 to 700.0 (°F)
	IR	15	-200 to 1300 ()	/ -300 to 2300 (°F)
	IR	16	0 to 1700 ()	/ 0 to 3000 (°F)
	IR	17	0 to 1700 ()	/ 0 to 3000 (°F)
	IR	18	100 to 1800 ()	/ 300 to 3200 (°F)
	IR	19	0 to 90 ()	/ 0 to 190 (°F)
	IR	20	0 to 120 ()	/ 0 to 240 (°F)
Analog input	0 to 20mA	21	0 to 165 ()	/ 0 to 320 (°F)
	0 to 5V	22	0 to 260 ()	/ 0 to 500 (°F)
	0 to 10V	23	Use the following ranges for scaling: -1999 to -199.9 to 999.9, Vary Depending on "L", "H" value	

The default is "5".

• SERR will be display when a platinum resistance thermometer is mistakenly connected while input type is not set for it. To clear the SERR display, correct the wiring and cycle the power supply.

Input type	Input	Setting	Setting range
Current input	4 to 20mA	0	Use the following ranges for scaling: -1999 to 999.9, -199.9 to 999.9, -19.99 to 99.99
Voltage input	0 to 20mA	1	0 to 999.9 to 999.9, -19.99 to 99.99
	1 to 5V	2	-1.999 to 9.999
	0 to 5V	3	0 to 9.999
	0 to 10V	4	

The default is "0".

Alarms

Setting	Alarm type	Alarm output function	Positive alarm value (X)	Negative alarm value (X)
0	No alarm function	Output off		
*1	Deviation upper/lower limit	ON SP	Vary with "L", "H" values	
2	Deviation upper limit	ON SP		
3	Deviation lower limit	ON SP		
*1	Deviation upper/lower range	ON SP	Vary with "L", "H" values	
*1	Deviation upper/lower limit standby sequence ON	ON SP	Vary with "L", "H" values	
6	Deviation upper limit standby sequence ON	ON SP		
7	Deviation lower limit standby sequence ON	ON SP		
8	Absolute value upper limit	ON SP		
9	Absolute value lower limit	ON SP		
10	Absolute value upper limit standby sequence ON	ON SP		
11	Absolute value lower limit standby sequence ON	ON SP		
12	LBA (only for alarm 1)			

*1: Upper and lower limits can be set for parameters 1, 4 and 5 to provide for different types of alarm. These are indicated by the letter "L" and "H".

* The default is "2".

Error display (trouble shooting)

When an error has occurred, the No.1 display shows the error code. Take necessary measure according to the error code, referring the table below.

No.1 display	Meaning	Action	Status at error
SERR (S. Err)	Input error *2	Check the wiring of inputs, disconnections, shorts and input type.	Control output Alarm OFF Operates as above the upper limit.
	A/D converter error *2	After the correction of input error, turn the power OFF and then back ON again. If the display remains the same, check the input signal. If the display changes to normal, a probable cause can be external noise affecting the control system. Check for external noise.	OFF OFF
E111 (E111)	Memory error	Turn the power OFF and then back ON again. If the display remains the same, the controller must be repaired. If the display is restored to normal, then a probable cause can be external noise affecting the control system. Check for external noise.	OFF OFF
HERR (H. Err)	Internal circuit error *2		OFF OFF

If the input value exceeds the display limit (-1999 to 9999), though it is within the control range, the display will be under -1999 and above 9999. Under these conditions, control output and alarm output will operate normally.

Refer to "E5CN/AN/EN User's Manual" for details of control range.

*2: Error shown only for "Process value / Set point". Not shown for other status.

Warning Symbols

CAUTION

- Do not touch the terminals while power is being supplied.
Doing so may occasionally result in minor injury due to electric shock.
- Do not allow pieces of metal, wire clippings, or fine metallic shavings or filings from installation to enter the product. Doing so may occasionally result in electric shock, fire, or malfunction.
- Do not use the product where subject to flammable or explosive gas. Otherwise, minor injury from explosion may occasionally occur.
- Never disassemble, modify, or repair the product or touch any of the internal parts. Minor electric shock, fire, or malfunction may occasionally occur.
- CAUTION - Risk of Fire and Electric Shock**
- (1) This product is UL listed as Open Type Process Control Equipment. It must be mounted in an enclosure that does not allow fire to escape externally.
- (2) More than one disconnect switch may be required to de-energize the equipment before servicing.
- (3) Signal inputs are SELV, limited energy.
- (4) Contact to: To reduce the risk of fire or electric shock, do not interconnect the outputs of different Class 2 circuits.
- (5) If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur. Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions.
- (6) Tighten the terminal screws to between 1.13 and 1.36 Nm. Loose screws may occasionally result in fire.
- (7) Set the parameters of the product so that they are suitable for the system being controlled. If they are not suitable, unexpected operation may occasionally result in property damage or accidents.
- (8) A malfunction in the Temperature Controller may occasionally make control operations impossible or prevent alarm outputs, resulting in property damage. To maintain safety in the event of malfunction of the Temperature Controller, take appropriate safety measures, such as installing a monitoring device on a separate line.
- (9) A semiconductor is used in the output section of long-life relays. If excessive noise or surge is impressed on the output terminals, a short-circuit failure is likely to occur. If the output remains shorted, fire will occur due to overheating of the heater or other cause.
- (10) Take measures in the overall system to prevent excessive temperature increase and to prevent fire from spreading.

Suitability for Use

- OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the products in the customer's application or use of the product. Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.
- Know and observe all prohibitions of use applicable to this product.
- NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
- See also Product catalog for Warranty and Limitation of Liability.

Precautions for Safe Use

- Be sure to observe the following precautions to prevent operation failure, malfunction, or adverse affects on the performance and functions of the product. Not doing so may occasionally result in unexpected events.
- (1) The product is designed for indoor use only. Do not use the product outdoors or in any of the following locations.
- Places directly subject to heat radiated from heating equipment.
 - Places subject to splashing liquid or oil atmosphere.
 - Places subject to direct sunlight.
 - Places subject to corrosive gas (in particular, sulfide gas and ammonia gas).
 - Places subject to intense temperature change.
 - Places subject to icing and condensation.
 - Places subject to vibration and large shocks.
- (2) Use/store within the rated temperature and humidity ranges.
- (3) To allow heat to escape, do not block the area around the product.
- (4) Be sure to wire properly with correct terminals.
- (5) Use special crimp terminals (M3.5 to M4.0, 0.25 to 0.5 mm²) or crimped terminals for wiring. To connect bare wires to the terminal block, use either braided or solid wires with a gauge of AWG24 to AWG14 (equal to a cross-sectional area of 0.0205 to 0.081 mm²). (The spacing length is 5 to 6 mm.) Up to two wires of same size and type, or two crimped terminals can be inserted into a single terminal.
- (6) Do not wire the terminals which are not used.
- (7) Allow as much space as possible between the controller and devices that generate a powerful high-frequency or surge.
- (8) Separate the high-voltage or large-current power lines from other lines, and avoid parallel or common wiring with the power lines when you are wiring to the terminals.
- (9) Use the product with the rated voltage and current.
- (10) Make sure that the rated voltage is attained within two seconds of turning ON the power using a switch or relay contact. If the voltage is applied gradually, the power may not be reset or output malfunctions may occur.
- (11) Make sure that the Temperature Controller has 30 minutes or more to warm up after turning ON the power before starting actual control operations to ensure the correct temperature display.
- (12) When executing self-tuning, turn the load and the unit ON simultaneously, or turn the load ON before you turn the controller ON.
- (13) A switch or circuit breaker should be provided close to this unit.
- (14) The switch or circuit breaker should be within easy reach of the operator, and must be marked as a designated point for self-tuning.
- (15) Always turn OFF the power supply before pulling out the interior of the product, and never touch nor apply shock to the terminals or electronic components. When inserting the interior of the product, do not allow the electronic components to touch the case.
- (16) Do not use paint thinner or similar chemical to clean with. Use standard grade alcohol.
- (17) The output may turn OFF when shifting to certain levels. Take this into consideration when performing control.
- (18) The number of EEPROM write operations is limited. Therefore, use RAM write mode when frequently overwriting data.
- (19) Consult the OMRON sales representative about using the ES1B Infrared Thermosensor's external power supply for other purposes.

Specifications

Power supply voltage	100-240VAC type 50-60Hz

<tbl_r cells

